



Presto LIFTS

worldwide material handling
and ergonomic solutions

PowerStak Lite

PPS1500-62NFO-21

PPS1500-62NFO-27



PowerStak Lite
For Light Duty Use
**Installation, Operation
and Service Manual**

Model Number _____

Serial # _____

Date Placed in Service _____

IMPORTANT: READ CAREFULLY

BEFORE INSTALLING OR OPERATING LIFT

Part orders are subject to a \$50 minimum charge.

**PowerStak Lite
For Light Duty Use**

Presto Lifts Limited Power Stacker Warranty Policy

Presto Lifts warrants the Power Stacker against defects on the mast, fork carriage, chains, pumps, DC motors, controllers, cylinders and wiring harnesses from faulty material and workmanship for a period of one (1) year from the date of invoice.

All wear items such as batteries, wheels, motor brushes, seals, bearings, hydraulic hoses, all switches, battery chargers and forks have a limited warranty against defects in faulty material and workmanship for a ninety (90) day period from the date of invoice and 30 day limited warranty on labor. Please note that prior authorization from Presto Lifts is required on all warranty work.

There are no implied warranties of any kind, more specifically; there are no warranties of merchantability or fitness for any particular purpose. Presto Lifts' sole warranty shall be as set forth in this limited warranty. Presto Lifts will elect to repair or replace a defective component without charge, if any components should become defective within the limited warranty period. Proof of purchase is required for warranty. The charge for shipping the defective component is the responsibility of the buyer and must be accompanied with an RGA number. The shipping charge to return the component to the buyer is the responsibility of Presto Lifts, Inc.

This limited warranty does not cover labor expense for removal or reinstallation of components after thirty days. This limited warranty shall not cover, among other things: damages resulting from foreign matter or water, failure to provide reasonable and necessary maintenance, and if applicable, use of product while charger is plugged into an AC outlet, or failure to follow operating instructions. The limited warranty is not valid for damage resulting from negligence, accident, unreasonable use, abuse or misuse, exceeding data plate capacities or altering the product without Presto Lifts authorization.

Presto Lifts expressly disclaims and excludes any liability for consequential, incidental, indirect or punitive damages or financial loss to people or property resulting from any breach of warranty or the operation or failure of this product.

Presto Lifts makes no representation that this product complies with local, state, or federal safety/product standards codes. Should this product fail to comply in any way with those codes, it shall not be considered a defect of materials or workmanship. Presto Lifts shall not be held liable for any damages resulting from noncompliance. It is the dealer's responsibility to exercise this limited warranty. This limited warranty is provided to the original purchaser (defined as the original end user) and is nontransferable. This constitutes the complete and final agreement involving Presto Lifts and limited warranty obligations for products.

This manual was current at the time of printing. To obtain the latest, most updated version,
please contact the Customer Service Department or go to our website: www.PrestoLifts.com -- you will find a complete list of current Owner's Manuals to print.

PowerStak Lite For Light Duty Use

TABLE OF CONTENTS

SECTION 1:	
Limited Warranty	2
Introduction.....	4
SECTION 2:	
Safety	7-8
SECTION 3:	
Installation.....	8
A. Inspection	8
B. Removing from Pallet	8
C. Preparation for Use.....	9
SECTION 4:	
Operation.....	10
A. Operating Instructions.....	10
B. Daily Operations Maintenance Checks.....	12
Suggested Daily Operator Checklist.....	11
SECTION 5:	
Battery Maintenance	12
A. Preparing to Charge a Battery	12
B. Charging the battery	12
C. Warnings and Battery Info.....	12
D. Battery maintenance.....	12
E. Charger Operation	13
SECTION 6:	
Maintenance	13
A. Weekly Operations Maintenance Checks.....	13
B. Monthly Operations Maintenance Checks	13
SECTION 7:	
Troubleshooting	14
ORDERING REPLACEMENT PARTS	38
RESTOCKING POLICY	39

LIST OF FIGURES:

Figure 1: PPS1500-62NFO-21.....	5
Figure 2: PPS1500-62NFO-27.....	6
Figure 3: PPS1500-62NFO-21 & PPS1500-62NFO-27	15
Figure 4: PPS1500-62NFO-21 & PPS1500-62NFO-27 Exploded View.....	16
Figure 5: Lift Frame Assembly PPS1500-62NFO-21 & PPS1500-62NFO-27	18
Figure 6: Cylinder View.....	19
Figure 7: Caster Wheel View	20
Figure 8: Drive Unit View	21
Figure 9: Control Pod.....	22
Figure 10: Steering Assembly	23
Figure 11: Power Unit View	24
Figure 12: Carriage Assembly PPS1500-62NFO-21 & PPS1500-62NFO-27.....	25
Figure 13: Labels & Precautionary Warnings.....	26
Figure 14-21: Wiring Diagrams (Prior to January 2011).....	27-34
Figure 22-24: Wiring Diagrams (January 2011 to present)	35-37

PowerStak Lite For Light Duty Use

SECTION 1 INTRODUCTION

This manual attempts to provide all of the information necessary for the safe and proper installation, operation and maintenance of Presto Lifts Inc. battery operated, Power Stak. It is important that all personnel involved with the installation, maintenance or operator of the stacker read this manual. Additional manuals are available upon request or at www.PrestoLifts.com.


Each Presto stacker is equipped with nameplate, serial number and model identifications. Please refer to these numbers when ordering parts or requesting further information.

The Presto stackers are designed for lifting, lowering and positioning a wide variety of loads. WHERE UNIQUE SITUATIONS ARISE, WHICH ARE NOT COVERED IN THIS MANUAL, CALL PRESTO LIFTS FOR FURTHER INSTRUCTIONS.

The battery operated stackers are designed for in-plant/non-hazardous locations only. They can be used in a 8' or larger aisle. These units are not for personnel lifting.

PowerStak Lite For Light Duty Use


Figure 1:

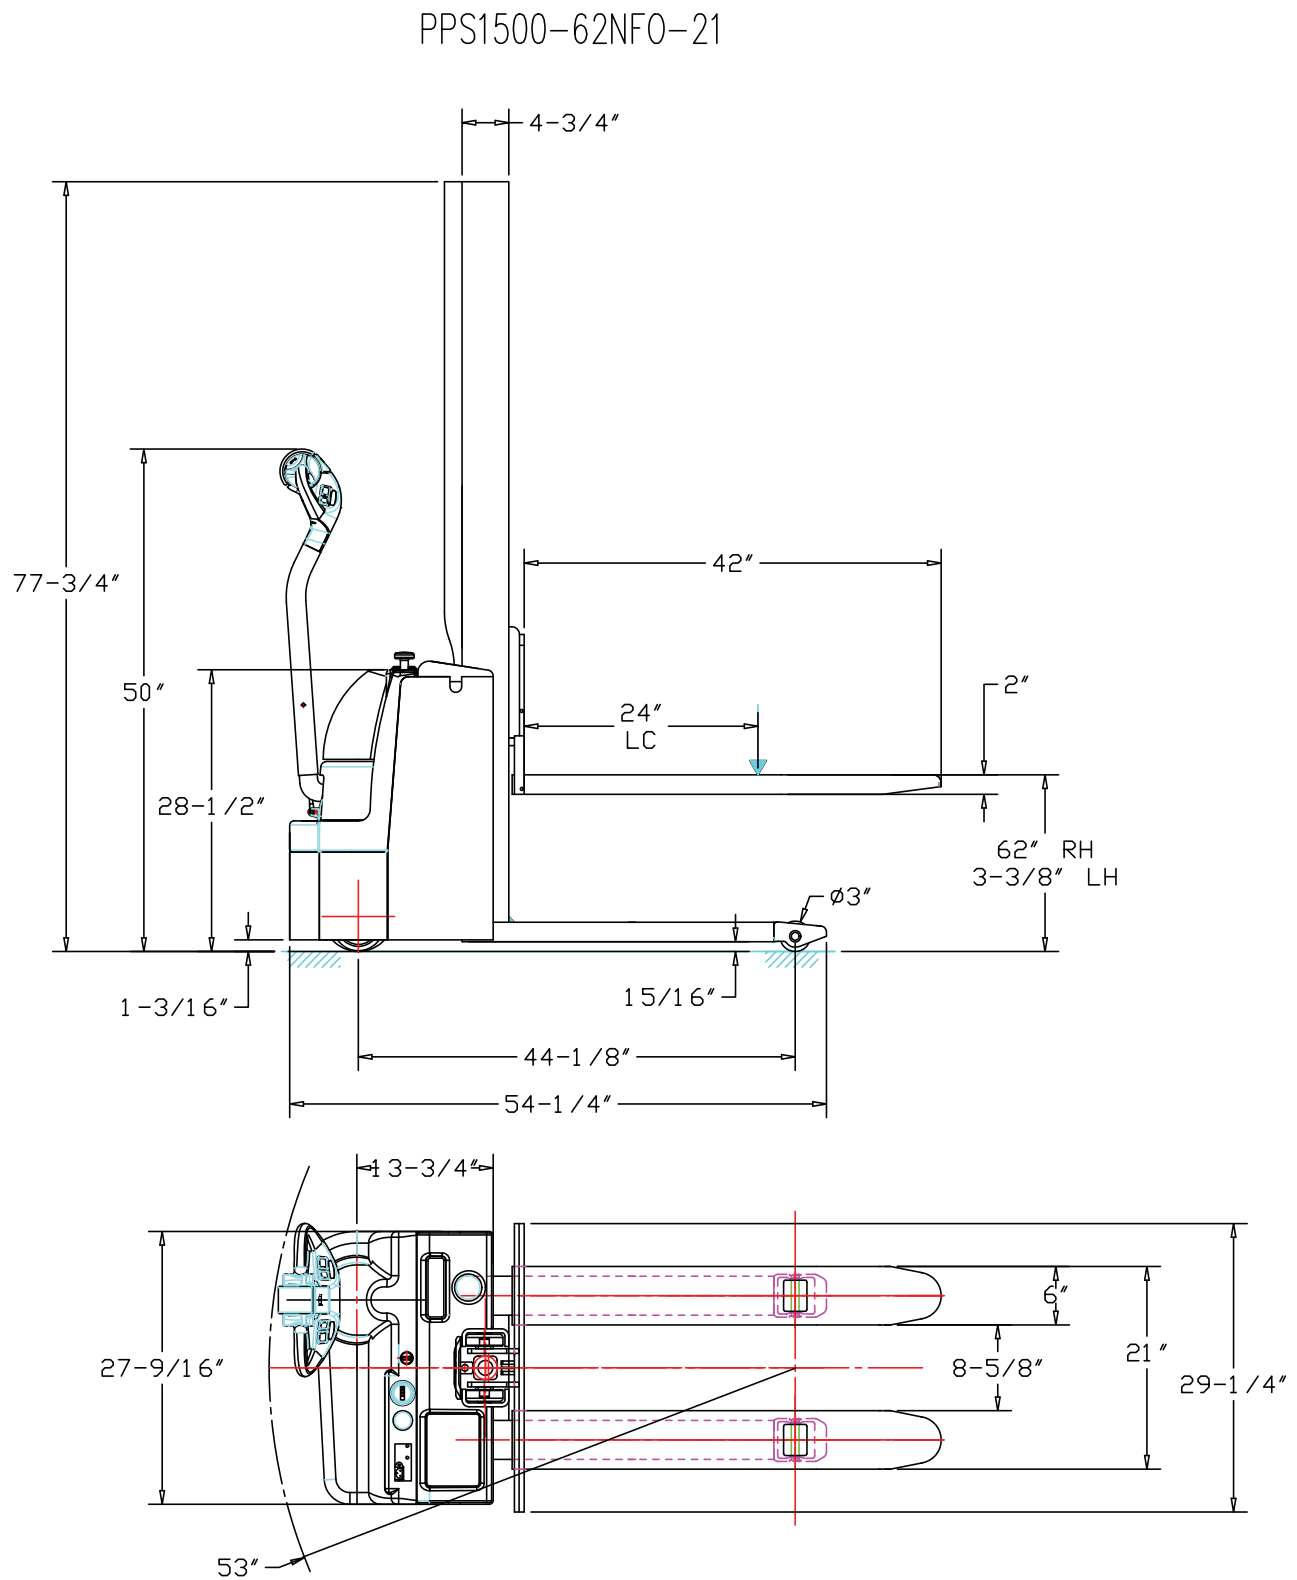

REV 12/3/08

PowerStak Lite For Light Duty Use

Figure 2:

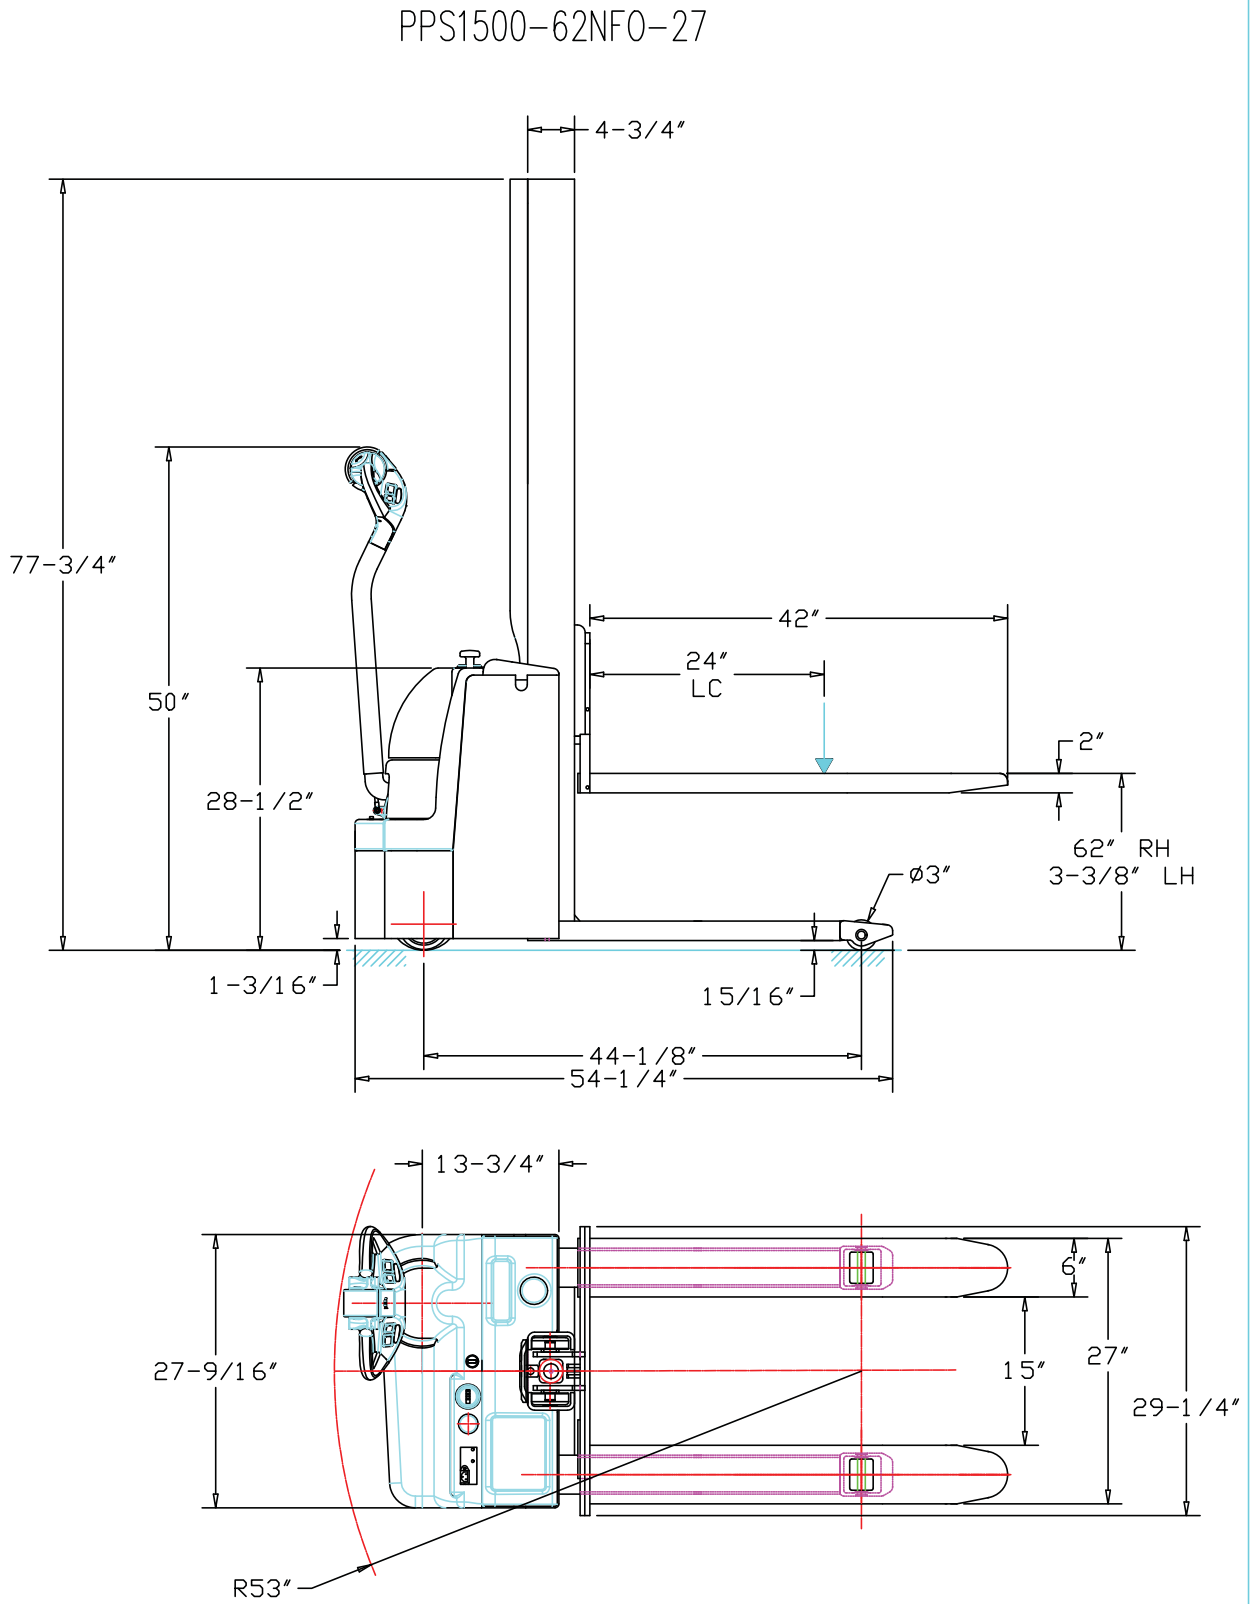

REV 12/9/2008

PowerStak Lite For Light Duty Use

SECTION 2 **SAFETY**

You must be trained and certified to operate this powered stacker. Federal law states that only properly trained operators are permitted to operate a powered industrial stacker and that your employer must train you and certify that you are qualified. (OSHA 1910.178 29QFR-7-1-06 Edition)

Presto lifts does not offer operator training. Operator training programs may be offered by your local Presto Lifts dealer or obtained online. Enter, "powered industrial truck operator training" into a search engine.

The battery operated stackers are very powerful lifts capable of doing large amounts of work.

DO NOT OPERATE THESE LIFTS WITHOUT CAREFULLY READING THIS MANUAL. In order to provide for the safe operation of these stackers, Presto Lifts Inc. has identified certain hazards that may occur during the maintenance and use of these lifts. For safety reasons these units are designed to be serviced or repaired in the fully lowered position. If performed properly, this will greatly reduce the possibility of injury.

WARNING!

When servicing the unit:

1. Key should be in "OFF" position.
2. E-stop should be depressed.
3. Disconnect the batteries at the terminals.
 - Do not perform any repair work on lifts if there is a load on the forks or platform.
 - Do not perform any repair work if the forks or platform is in the raised position.
 - All personnel must stand clear of the lift while in motion.
 - Do not put hands or feet under the forks or platform.
 - Do not stand underneath the forks or platform.
 - Do not stand in front of the stacker while in motion.
 - Do not stand, sit or climb on the lift.
 - Do not use the lift on soft, uneven or unstable surfaces.
 - Do not exceed the load center or capacity.

WARNING!

You or others around you can be seriously injured or even killed if you don't use this stacker correctly. Read and obey all warnings and instructions in this manual and on the stacker. It is your responsibility before starting work to make sure it is in good working order.

Always be alert to the area around you and watch where you are walking. Be careful that you don't get pinned or crushed between the stacker and a fixed object such as a wall or post.

- Watch your hands and feet. A foot or hand caught between the stacker and a fixed object will be crushed or even cut off.
- If traveling forks first, keep both hands on the control handle and be careful when changing direction of travel. Keep your feet clear of the stacker.
- Keep the stacker under control at all times. Operate at a speed that allows you to stop safely. Be even more careful on slippery or uneven surfaces. Do not run over objects on the floor.
- Perform all stacker movements smoothly and at a speed that will give you time to react if an emergency occurs.

Tipovers and falls are very serious accidents; you can be crushed or even killed. To prevent injury, know where you are at all times and follow the rules of safe stacker operation.

- Be careful when working around docks, dockboards and trailers. Stay away from the edge of docks and ramps. Check to make sure the wheels of truck or trailers are chocked.
- Travel with the load or forks close to the ground. Watch for overhead obstructions. Perform all stacker movements smoothly and at a speed that will give you time to react in an emergency.
- Keep your hands and feet away from all moving parts such as masts, chains, forks or wheels.
- Never stand on or under the forks, or allow anyone else to stand on or under them. Never ride on the stacker or allow anyone else to ride. There is no safe place to sit or stand.
- Before you leave your stacker, be sure to lower the forks to the floor. Shut the stacker off with the key.

PowerStak Lite For Light Duty Use

WARNINGS

- DO NOT** use this stacker until you have been trained and authorized to do so.
- DO NOT** operate until you have read all warnings and instructions.
- DO NOT** exceed load center or load weight capacities (check capacity plate).
- DO NOT** operate until you have checked the conditions of the stacker: lift systems, forks, chains, and cables.
- DO NOT** use if any part is damaged, worn or not working properly.
- DO NOT** use on ramps or inclines. Only smooth level surfaces.
- DO NOT** use for lifting or carrying people.
- DO NOT** handle unbalanced, unstable or loosely stacked loads.
- DO NOT** travel with forks or platform in an elevated position.
- DO NOT** handle tall, unsecured or unstable loads that could fall.
- DO NOT** allow people to stand or pass under forks or platform with or without load.
- DO NOT** operate when parts of anyone's body may be close to mast structure or any moving parts.
- DO NOT** drop loads on platform or forks.
- DO NOT** alter or modify this stacker in any way.

SECTION 3 INSTALLATION

A. INSPECTION:

Upon receipt of the stacker, inspect the equipment completely to determine if there is any shipping damage,

and that the lift is complete. Presto tests and inspects every piece of equipment prior to shipment. If damage is apparent, a freight claim must be filed with the freight company. Do not use the stacker if there appears to be any damage. With the stacker in a lowered position, check the following:


- Check for signs of damage especially to the back cabinet that houses the battery, electrical/hydraulic power pack.
- Check all electrical and hydraulic connections for tightness.
- Remove back panel.
 1. Turn key switch to "OFF" position.
 2. Push in E-stop and unscrew the red knob,
 3. Lift off back panel. There is enough wire to the key switch to allow the panel to be set aside.
- Inspect for any bent or damaged parts.

B. REMOVING FROM PALLET

Each of the Presto stackers is shipped out on a pallet or skid. Prior to removing the unit from the pallet or skid, remove all tie down straps and packaging. Visually inspect the unit as closely as possible.

With an overhead hoist or forklift, carefully pick up the unit taking into consideration the center of gravity of the unit. If you choose to pick the unit with an overhead hoist, use a nylon sling and hoist with a minimum of 2,000-lb. capacity. The nylon sling will not do any damage to the steel construction of stacker. Pick the unit up. On conventional masts use the top crossmember of the lift. On narrow masts the cover must be removed to access lifting equipment. Be careful of the stacker swinging once fully lifted off the pallet or skid. Have

Operational buttons

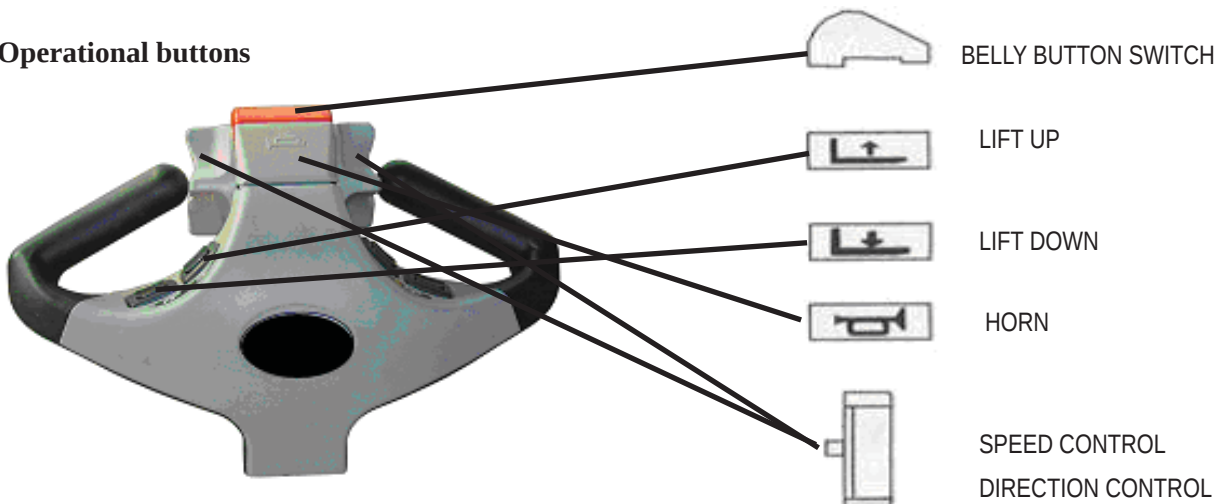

PowerStak Lite For Light Duty Use

all personnel completely cleared from the area.
Pick the unit up approximately six inches above the pallet or skid. Once raised, remove the pallet or skid from below the lift. Do not move the lift around in the air. Lower the stacker on the ground.

C. PREPARATION FOR USE

This stacker left our factory in new condition. It has been inspected and weight tested to assure all performance standards have been met.

Visually inspect the stacker for damage. Check for attachments and accessories that may have been ordered. If there is any damage or missing parts, report it to your carrier and your Presto dealer immediately.

Remove all metal/plastic bands, cardboard and other material used for shipping purposes.

Check to see if chains are in place, and that the lift system is in working order. Inspect for oil leaks.

See instructions for removing back panel on pg. 5.

Connect battery cable. Check cables and wires on battery charger as well as battery.

PowerStak Lite For Light Duty Use

SECTION 4 **OPERATION**

A. OPERATING INSTRUCTIONS:

Operational Speeds:

The Presto Power Stak is designed to operate at the following speeds:

Rise speed empty:	24fpm
Rise speed loaded:	17fpm
Lowering speed empty:	13fpm
Lowering speed loaded:	31fpm

To Raise and Lower:

There are two buttons located on both sides of the handle. The inside one is for raising the forks. The outside one is for lowering the forks. When operating, always make sure the load being lifted is within the loading capacity of your stacker and the load has been stacked safely on the pallet. Also, make sure that the length of the forks corresponds to the length of the pallet. In this way, the load rollers will place themselves in the opening at the end of the pallet, so that when you raise the forks, you will not break the bottom boards of the pallet. Always make sure that when entering the pallet that the forks are in the fully lowered position. Be careful when lifting pallets that are too short or too long for the stacker. It might destroy your pallet by breaking the bottom boards, and if the forks project through the end of the pallet, the tips of fork may go into the next pallet that is behind the pallet that you are lifting, which may bend the tips of forks and overload the capacity of the stacker.

To Travel:

To travel, rotate the butterfly controls throttle on the upper part of the handle. When rotating the butterfly control CW towards the forks, the stacker runs forwards in the forks first direction. When rotating the butterfly CCW towards you, the stacker runs backwards in the handle first direction. Always make sure the stacker clears any obstruction when traveling, and that your path of travel is clear of people. Never carry loads above the loading capacity of the stacker. It is suggested that when traveling without a load, the forks be in the lowered position. The speed of the stacker is increased by the degree of the rotation in either direction; it functions like a throttle. When you release your hand from the butterfly control, it automatically will resume to the neutral

position and the speed of the stacker will slow down.

To Brake:

Your stacker is equipped with a magnetic brake. The brake is applied when the handle is in its vertical position between 10 – 15 degrees and lowered position between 80 – 90 degrees. The brake could be released when you pull down the handle at any point between 15 – 80 degrees. Always make sure the brake is released before operating the stacker. When the stacker is running, you could brake the stacker by raising the handle to its vertical position or lowering the handle to its lowest position. Or, to turn the butterfly controls in the opposite direction, the change in direction of the motor will slow down, stop, and reverse the direction of stacker. **When parked**, always put the handle in the full vertical position with the brake applied and the forks in lowered position.

Reversing Safety:

At the end of the handle there is a large, red reversing bar (belly button switch) that is designed to protect the operator from injury. When the operator runs the stacker backwards, and the end of the handle comes in contact with the operator's body, the stacker will automatically reverse direction and travel away from the operator. When the reversing safety bar comes in contact with your body during operation, immediately release your hands from the butterfly control and put the handle up to its vertical position or down to its lowest position and the brake is on. The reversing safety bar will automatically resume to its original position after being activated.

Horn:

As standard equipment, a horn that is located on the top of the handle.

**AUTHORIZED OPERATORS SHOULD READ
AND UNDERSTAND ALL INSTRUCTIONS,
PRECAUTIONS AND WARNINGS.
IMPROPER USE OF THIS LIFT TRUCK
COULD RESULT IN INJURY AND/OR DAMAGE
TO LOAD AND EQUIPMENT.**

- Inspect the lift for damaged or worn parts.
Do not use if not in safe operating condition.
- Use lift on hard level surfaces only.
- Make sure load is evenly distributed, not

**PowerStak Lite
For Light Duty Use**

SUGGESTED DAILY OPERATOR CHECKLIST

WALK AROUND INSPECTION

1. Check general condition of lift (loose or broken parts, etc.).
2. Check for dented or scratched panels.
3. Look for broken or cracked welds, broken or worn rollers and chains. Check for loose pins or fasteners.
4. Ensure condition of wheels are not flat spotted or chunked out.
5. Check for hydraulic leaks.
6. Make sure all precautionary labeling is in place and legible.
7. Check for hydraulic leaks

FUNCTIONAL INSPECTION

1. Check for proper operation of UP/DWN/FOR/REV controls.
2. Check operation of brake system.
3. Check for locations of belly button switch and horn.
4. Check for hydraulic leaks.

OPERATOR ID

DATE

**DO NOT USE LIFT IF NOT OPERATING
PROPERLY OR IF LIFT APPEARS
UNSAFE IN ANY WAY**

REPORT CONCERNS TO SUPERVISOR IMMEDIATELY!

PowerStak Lite

For Light Duty Use

loose or unstable, and is as far back on platform or forks as possible. *Do not* pick up loads on tips or forks or edge of platform.

- For fork models, adjust forks to the maximum practical width. Pick up loads on both forks.
- *Do not* overload. Check load center and load weight capacities on the nameplate.
- Make sure travel and work area is clear of obstructions.
- Check overhead clearance before lifting loads or transporting.

B. DAILY OPERATIONS MAINTENANCE CHECKS:

1. Battery

- A. Check for corroded and loose terminals. A white powder substance will be present if there is any existing corrosion.
- B. Visually inspect for any cracks or damage to the casing.
- C. Check for loose battery tie-downs.

2. Charger

- A. Inspect wire connections.
- B. Check power cord for nicks/damage.
- C. Check power charger for proper mounting.

3. Hydraulic System

- D. Inspect pump and cylinder for oil leaks.
- E. Check hydraulic oil level.
- F. Check hydraulic fittings and hoses.
- G. Check ram for nicks/damage.

4. Frame Assembly

- A. Check chain roller assembly connections.
- B. Check for any worn or damaged parts.

SECTION 5

BATTERY MAINTENANCE

A. PREPARING TO CHARGE A BATTERY

1. Always turn off E-stop and key switch before working with the batteries.
2. Be sure the area around the stacker and the battery is well ventilated while battery is being charged.
3. The battery terminals, connections and wiring connections should be clean and free of corrosion. When cleaning any of these components wear a face shield or other suitable protective eyewear.

B. BATTERY CHARGING

Charging must be performed with the charger that is provided with or prewired into the machine. During charging, the temperature in the battery must not exceed 120 F. Charging simultaneously with truck operation is not recommended. Plug the charger into a 115V outlet. Charge until the battery gauge indicator lights show fully charged (approximately 6-8 hours).

C. WARNINGS AND BATTERY INFORMATION

Avoid use of open flame near batteries. At temperatures around freezing point, battery capacity is reduced by 30%. The battery terminals, connections and wiring should be clean and free of corrosion. When cleaning any of these components, wear a face shield or other suitable protective eyewear. Read, understand, and follow all battery and battery manufacturer's specific precautions while working with and/or charging batteries.

D. BATTERY MAINTENANCE

To measure the voltage, use a digital voltmeter (DC) on the battery poles. The truck must not have been in use for the previous 30 minutes.

DANGER

Never alter the AC cord or plug provided. If it will not fit outlet, have proper outlet installed by a qualified electrician. Improper connection can result in a risk of an electric shock.



VOLTAGE

Approx. 12.7 V	Fully charged
Approx. 12.2 V	1/2 charged
Approx. 12.0 V	1/4 charged
Approx. 11.6 V	Discharged

PowerStak Lite For Light Duty Use

1. Disconnect the charger from the 110 volt wall outlet once the indicators read fully charged.

Note: The batteries are designed for intermittent use. Continual usage will diminish the life of the battery.

E. CHARGER OPERATION

Power Lamp

1. Green: Connection correct. Charger will operate normally.
2. Red: Bad connection or bad battery.

Fault

1. Red light blinks 3 times in 5 seconds: The output between charger is faulty, loose, or bad connection
2. Red light blinks 5 times in 5 seconds: The temperature is too hot for the charger to operate.
3. Building power is not compatible; too low or too high. +/- 10% is the general rule.

Charge Lamp

1. Red: Charger can charge normally. The battery is less than 70%
2. Orange: Battery is between 70% and 100% charged.
3. Green: Battery is at 100%. Fully charged.
4. No light: The charger can not charge the battery. Voltage of the battery may be too low to cause the charger to start. **It must be at 9 volts to initiate charge.**

SECTION 6 **MAINTENANCE**

Operation of Presto Power Stak is very simple — as is their construction. They require very little maintenance. Reasonable care will result in excellent trouble-free performance. The Power Stak is designed for one-man operation and ease of performance.

- Grease floor wheels and caster at least once a month.
 - Use only Hydraulic Oil AW32 or Dextron III in the hydraulic system.
 - *Do not* overload your lift.
 - Check brakes, steering mechanisms and controls before each use.

A. WEEKLY OPERATIONS MAINTENANCE CHECKS:

DAMAGE: Check for bent, dented, worn or broken parts.

LIFT SYSTEM: Check to assure that there is no binding or excessive play in the forks. Check for quiet and smooth operation of the lift cylinder. Check all moving parts and linkage.

LEAKS: Check hydraulic system for leaks and hydraulic oil level.

WHEELS AND CASTERS: Check for wear and that they are turning smoothly.

LIFT CHAINS: Check to see that they are in place and not loose.

FORKS: Check that they are not bent or cracked.

BRAKES: Ensure brakes work properly.

CABLES; WIRES: Check that there are no loose cables or wires.

LABELS: Ensure all precautionary labels and guards are in place.

B. MONTHLY OPERATIONS MAINTENANCE CHECKS:

1. Battery (maintenance free)

- A. Clean terminals.
- B. Clean battery compartment area if there are signs of corrosion.

2. Hydraulic System

- A. Clean and inspect hydraulic cylinder.
- B. Lubricate chain with a rust inhibitive lubricant (light machine oil).
- C. Check chain tension. It should be even on both chains. The chain should be tight enough so that it does not come off of the roller assembly.

PowerStak Lite For Light Duty Use

3. Frame Assembly

- A. Clean and lubricate all roller bearings, cam followers and all moving parts.
- B. Clean and inspect all welds.
- C. Check wheels for wear and damage.
- D. Inspect nameplate for legibility. Place the serial and model number shown on the nameplate on the cover of the manual for future reference.

4. Electrical

- A. Check batteries, motors, controllers, limit switches, electrical conductors and connections.

CAUTION:
DO NOT USE LIFT IF IT IS NOT
OPERATING PROPERLY,
OR APPEARS UNSAFE IN ANY WAY!

SECTION 7

TROUBLESHOOTING

Before starting the troubleshooting, you have to:

- A. Put the truck on an even and solid surface.
- B. Turn off key switch or disconnect the battery terminals.

1. Unit will not lift (motor does not run)

- Faulty wiring from fuse to lift switch in handle
- Faulty lift switch
- Faulty wiring from battery positive terminal to pump contactor to pump motor
- Burned out brushes in pump motor
- Low hydraulic pressure caused by:
 - Pressure relief valve needs adjustment
 - Pump check valve stuck open
 - Faulty solenoid valve
- Faulty wiring from lift switch to solenoid
- Faulty lift contactor
- Defective control circuit fuse
- Chain or roller bound

- Check oil level

2. Forks will not lower

- Look for binding in chains or rollers

3. No electrical power

Dead Batteries:

- Keyswitch on "OFF" position
- E-stop button depressed
- Loose or dirty battery connections
- Blown fuse(s)
- Faulty wiring from fuse to travel control switch
- Faulty control switch
- Faulty wiring from travel control switch direction contactor
- Faulty contactor

If the wheel is worn, replace wheel

**PowerStak Lite
For Light Duty Use**

Figure 3:

PPS1500-62NFO-21

PPS1500-62NFO-27




PowerStak Lite For Light Duty Use

Figure 4:

PPS1500-62NFO-21
PPS1500-62NFO-27

Exploded View

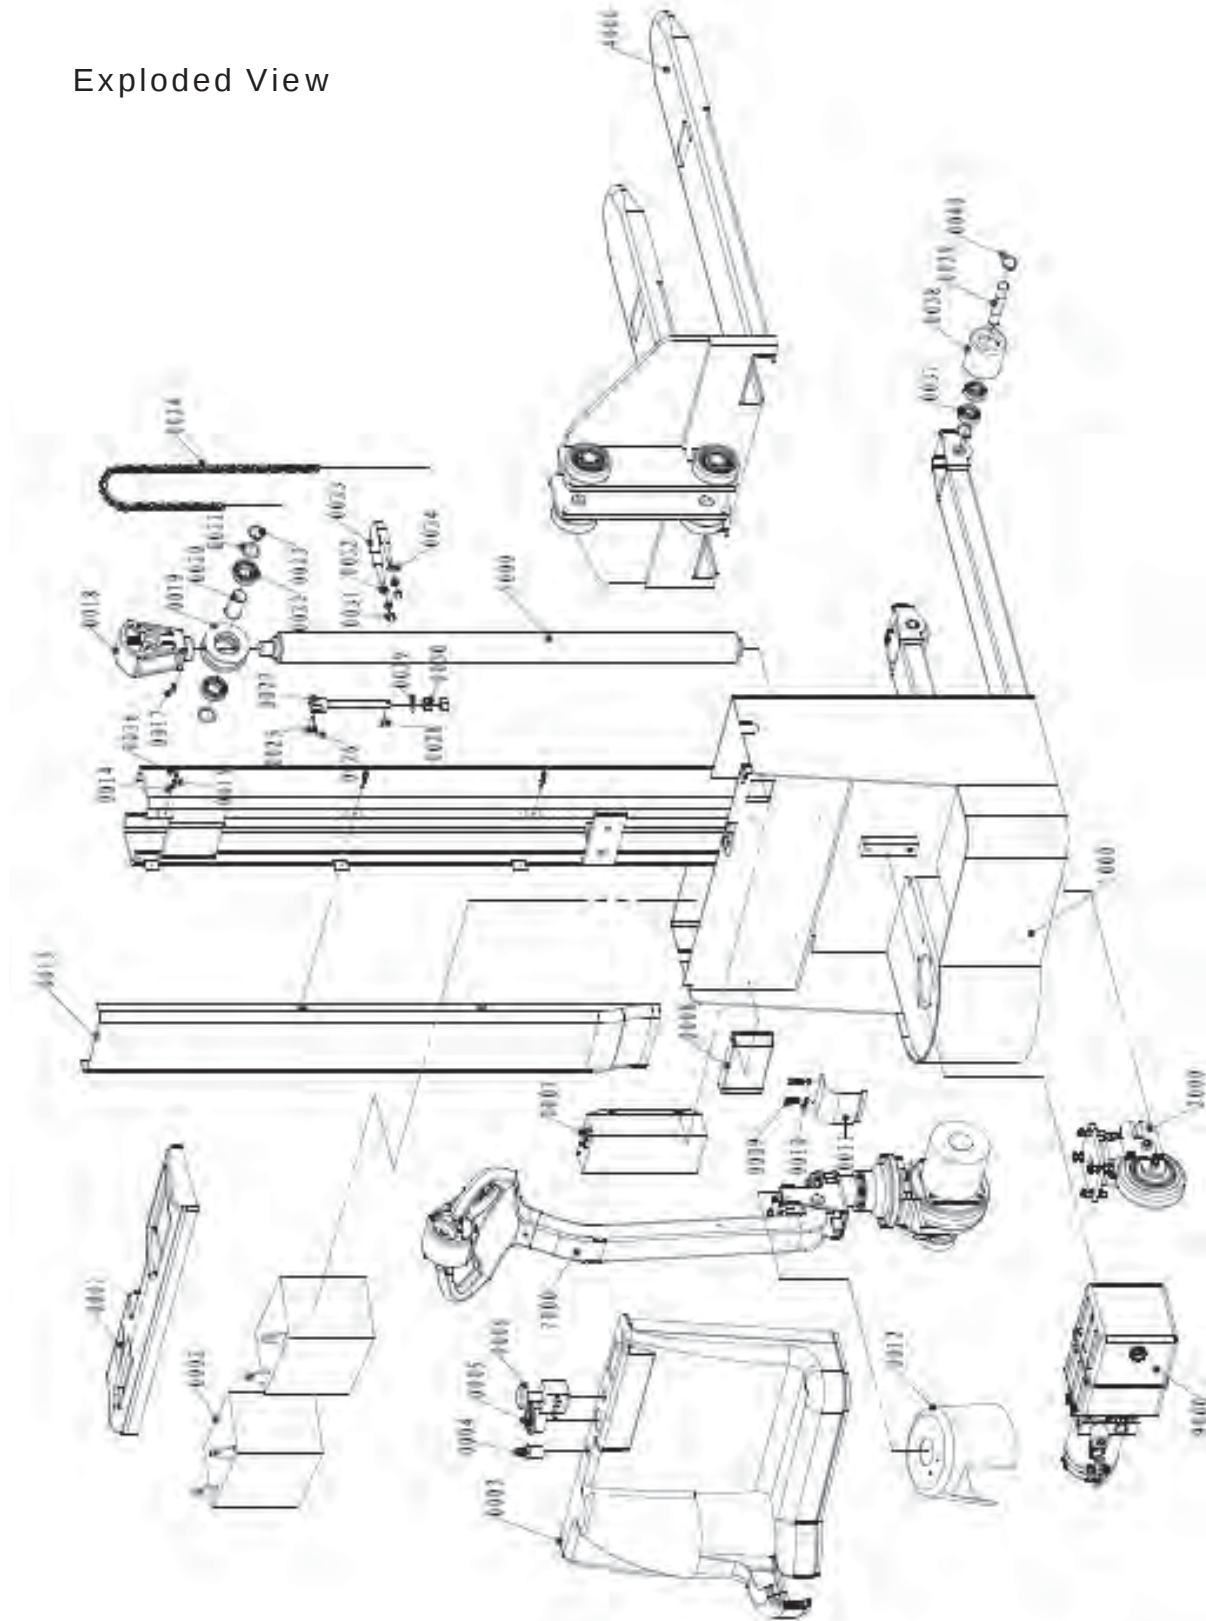

**PowerStak Lite
For Light Duty Use**

PPS1500-62NFO-21

PPS1500-62NFO-27

Item	Description	Qty
1000	Body Weld	1
2000	Balance Wheel	1
4000	Lift Frame	1
5000	Cylinder	1
7000	Steering Assy	1
9000	Power Unit	1
0001	Battery Cover	1
0002	Battery	2
0003	Rear Box Cover	1
0004	Key Switch	1
0005	Battery Meter	1
0006	E-Stop Switch	1
0007	Charger	1
0008	Electric System	1
0009	Bolt M6X20	2
0010	Spring Washer d6	2
0011	Retaining Plate	1
0012	Steering Round Cover	1
0013	Mast Cover	1
0014	Flat Washer 4	6
0015	Spring Washer 4	6
0016	Bolt M4X12	6

Item	Description	Qty
0017	Bolt M6X25	1
0018	Chain Wheel Cover	1
0019	Chain Wheel	1
0020	Chain Wheel Shaft	1
0021	Washer	2
0022	Bearing 6006	2
0023	Spring Washer 30	1
0024	Chain LH1234	1
0025	B-Pin 8 x 40	1
0026	Pin 2.5 x 12	1
0027	Chain Pole	1
0028	Pin 2.5 x 25	1
0029	Flat Washer 16	1
0030	Nut M16	2
0031	Nut M10	2
0032	Nut M10	2
0033	Cylinder Hoop	1
0034	Flat Washer 10	2
0037	Bearing 6204	4
0038	Front Wheel	2
0039	Pin	2
0040	Spring Washer	4


**PowerStak Lite
For Light Duty Use**

Figure 5:

PPS1500-62NFO-21

PPS1500-62NFO-27

Lift Frame Assembly

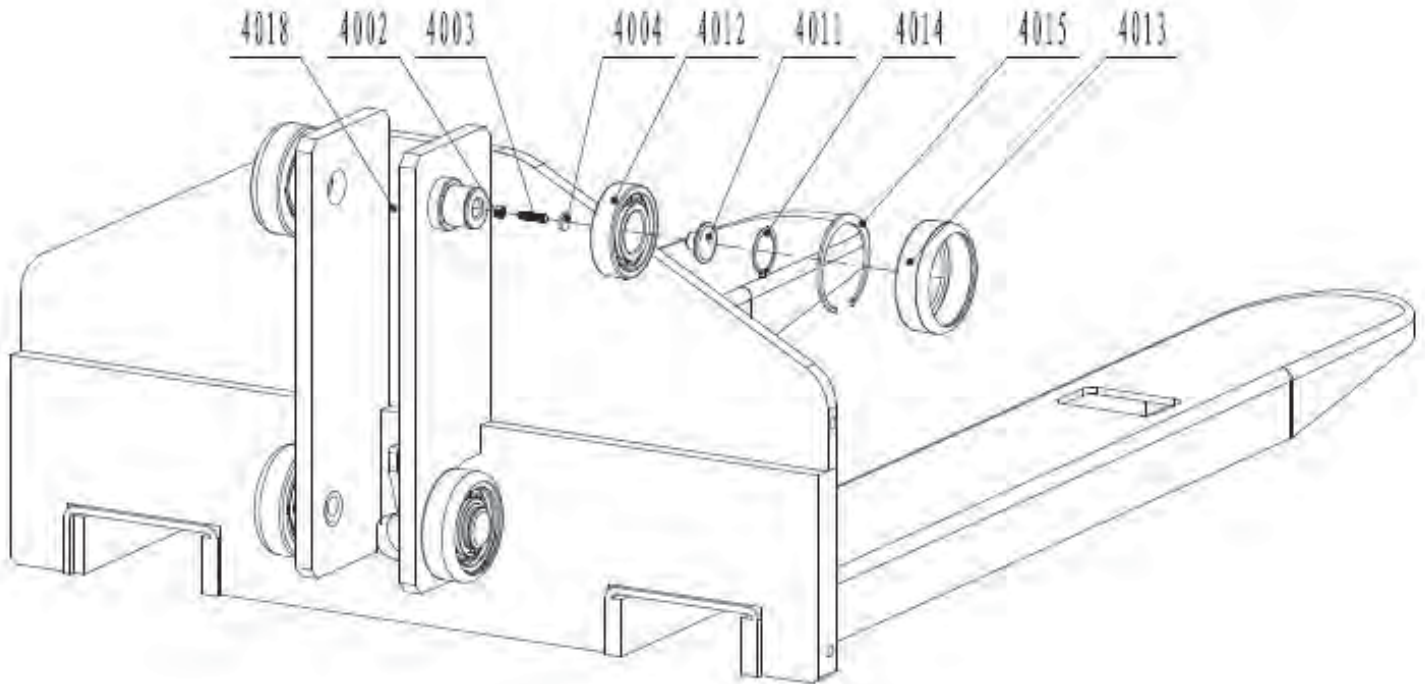

Item	Description	Qty
4002	Nut M6	4
4003	Bolt M6 x 25	4
4004	Middle Plate	4
4011	Adjustable Plate	4
4012	Bearing 6307	4
4013	Idler Wheel Cover	4
4014	Snap Ring 35	4
4015	Snap Ring 80	4
4018	Lift Frame	1


PowerStak Lite For Light Duty Use

Figure 6:

Cylinder View

PPS1500-62NFO-21

PPS1500-62NFO-27

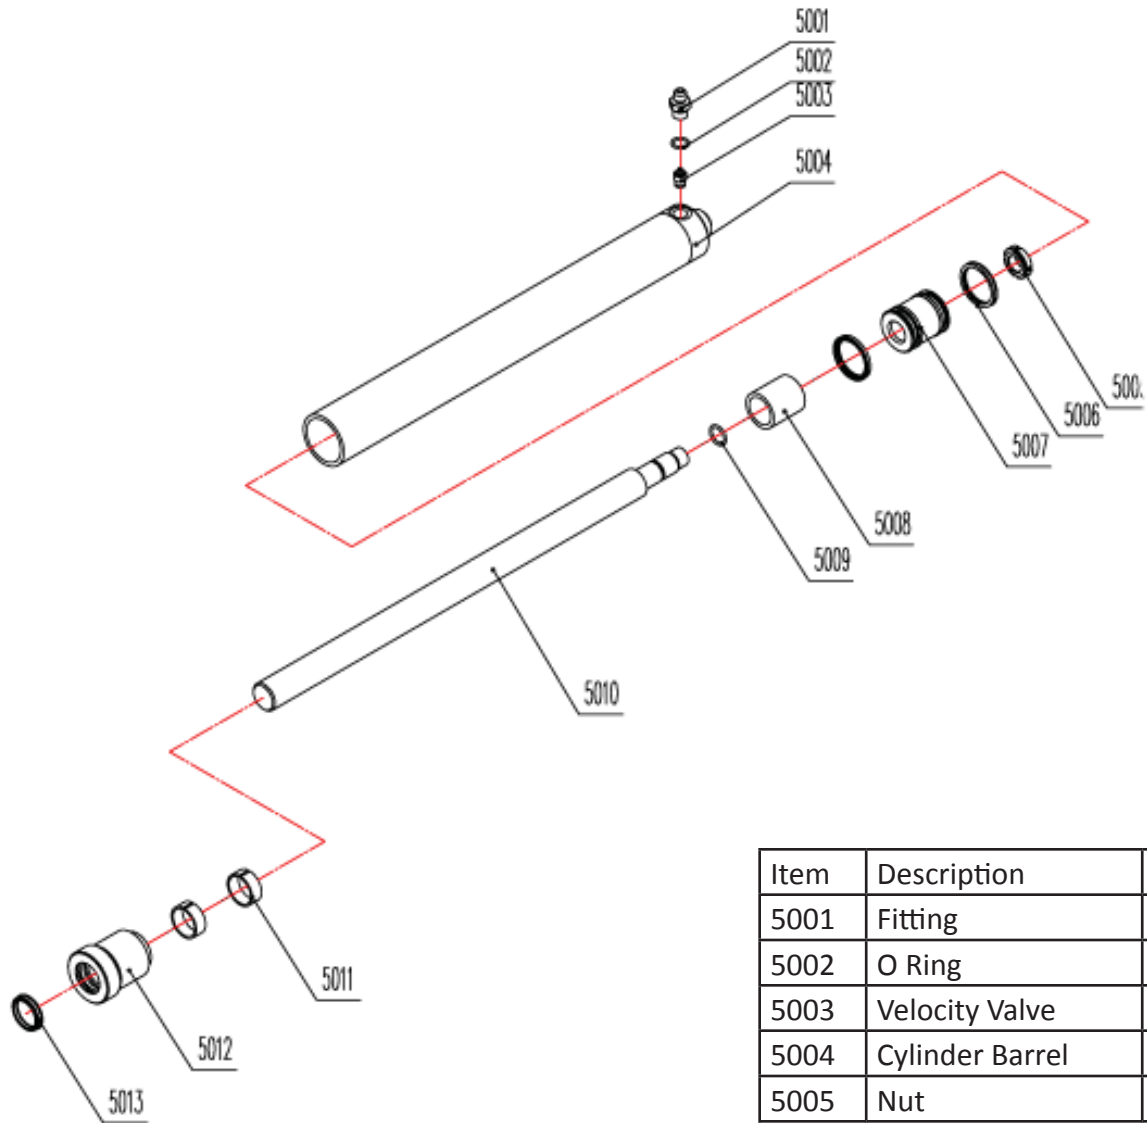


Item	Description	Qty
5001	Fitting	1
5002	O Ring	1
5003	Velocity Valve	1
5004	Cylinder Barrel	1
5005	Nut	1
5006	U Ring	2
5007	Piston	1
5008	Spacer	1
5009	O Ring	1
5010	Piston Rod	1
5011	Wearable Ring	2
5012	Direction Sleeve	1
5013	Dustproof Ring	1

PowerStak Lite For Light Duty Use


Figure 7:

Caster Wheel View PPS1500-62NFO-21 PPS1500-62NFO-27

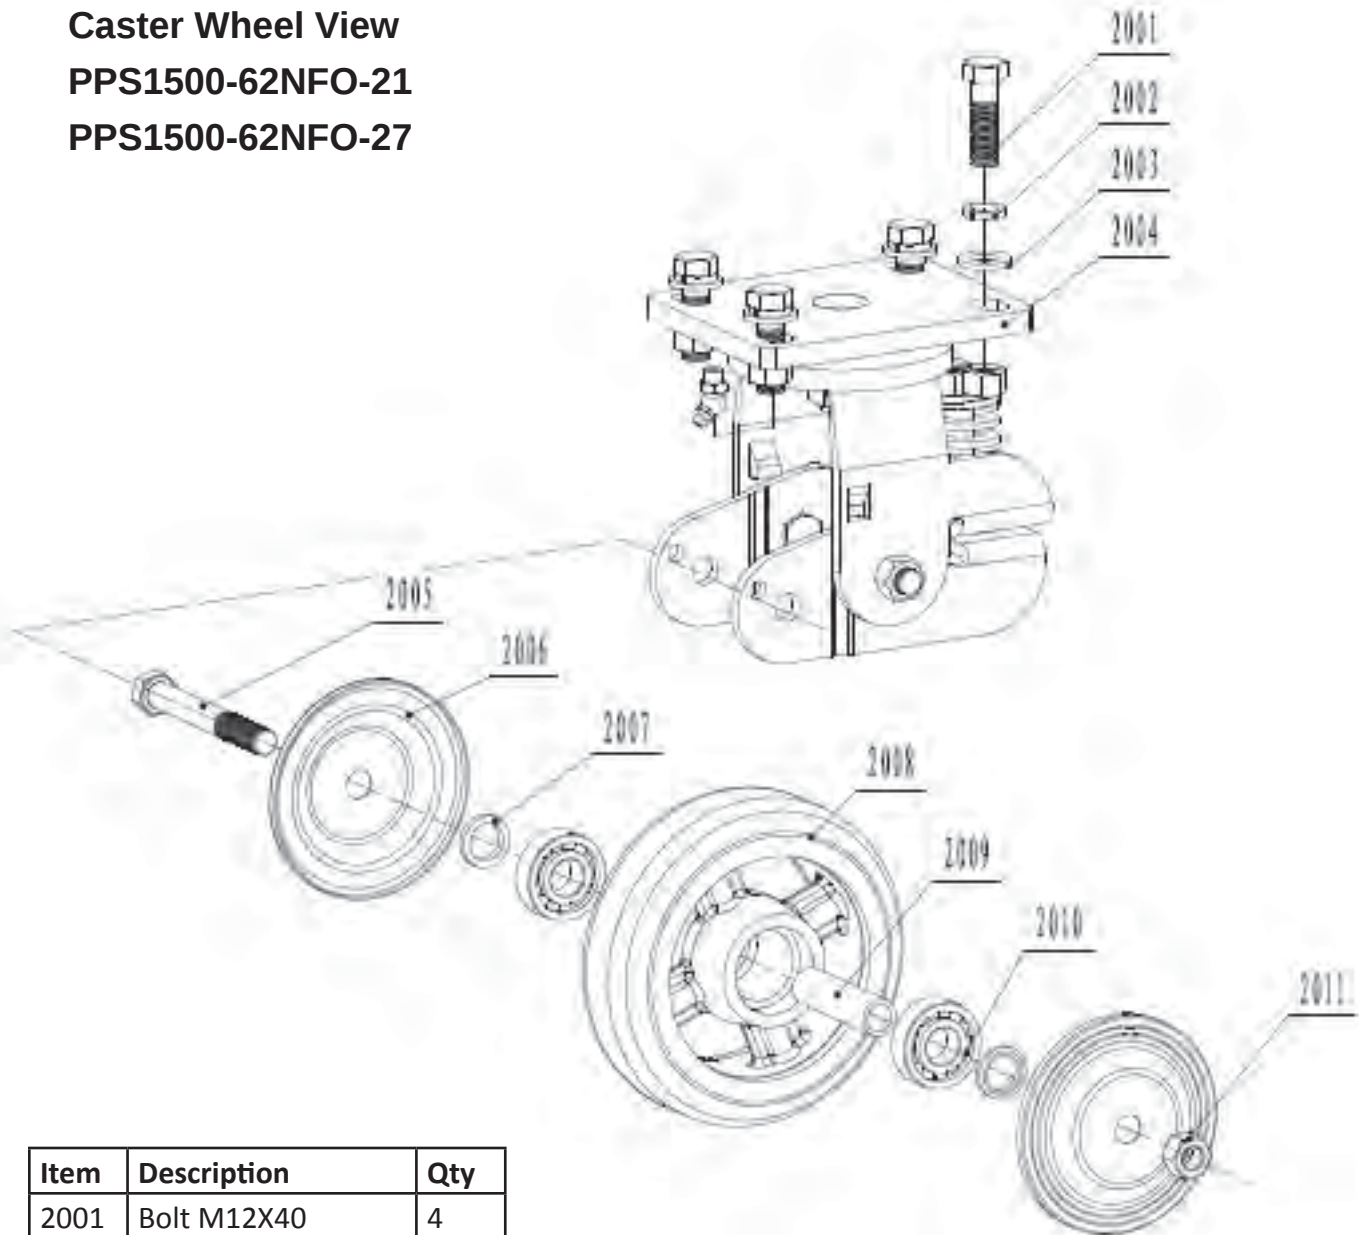

Item	Description	Qty
2001	Bolt M12X40	4
2002	Spring Washer 12	4
2003	Flat Washer 12	4
2004	Wheel Frame	1
2005	Bolt M12X90	1
2006	Wheel Side Cover	2
2007	Bearing Ring	2
2008	Wheel 125X56	1
2009	Sleeve	1
2010	Bearing 6203	2
2011	Nut M6	1

PowerStak Lite For Light Duty Use

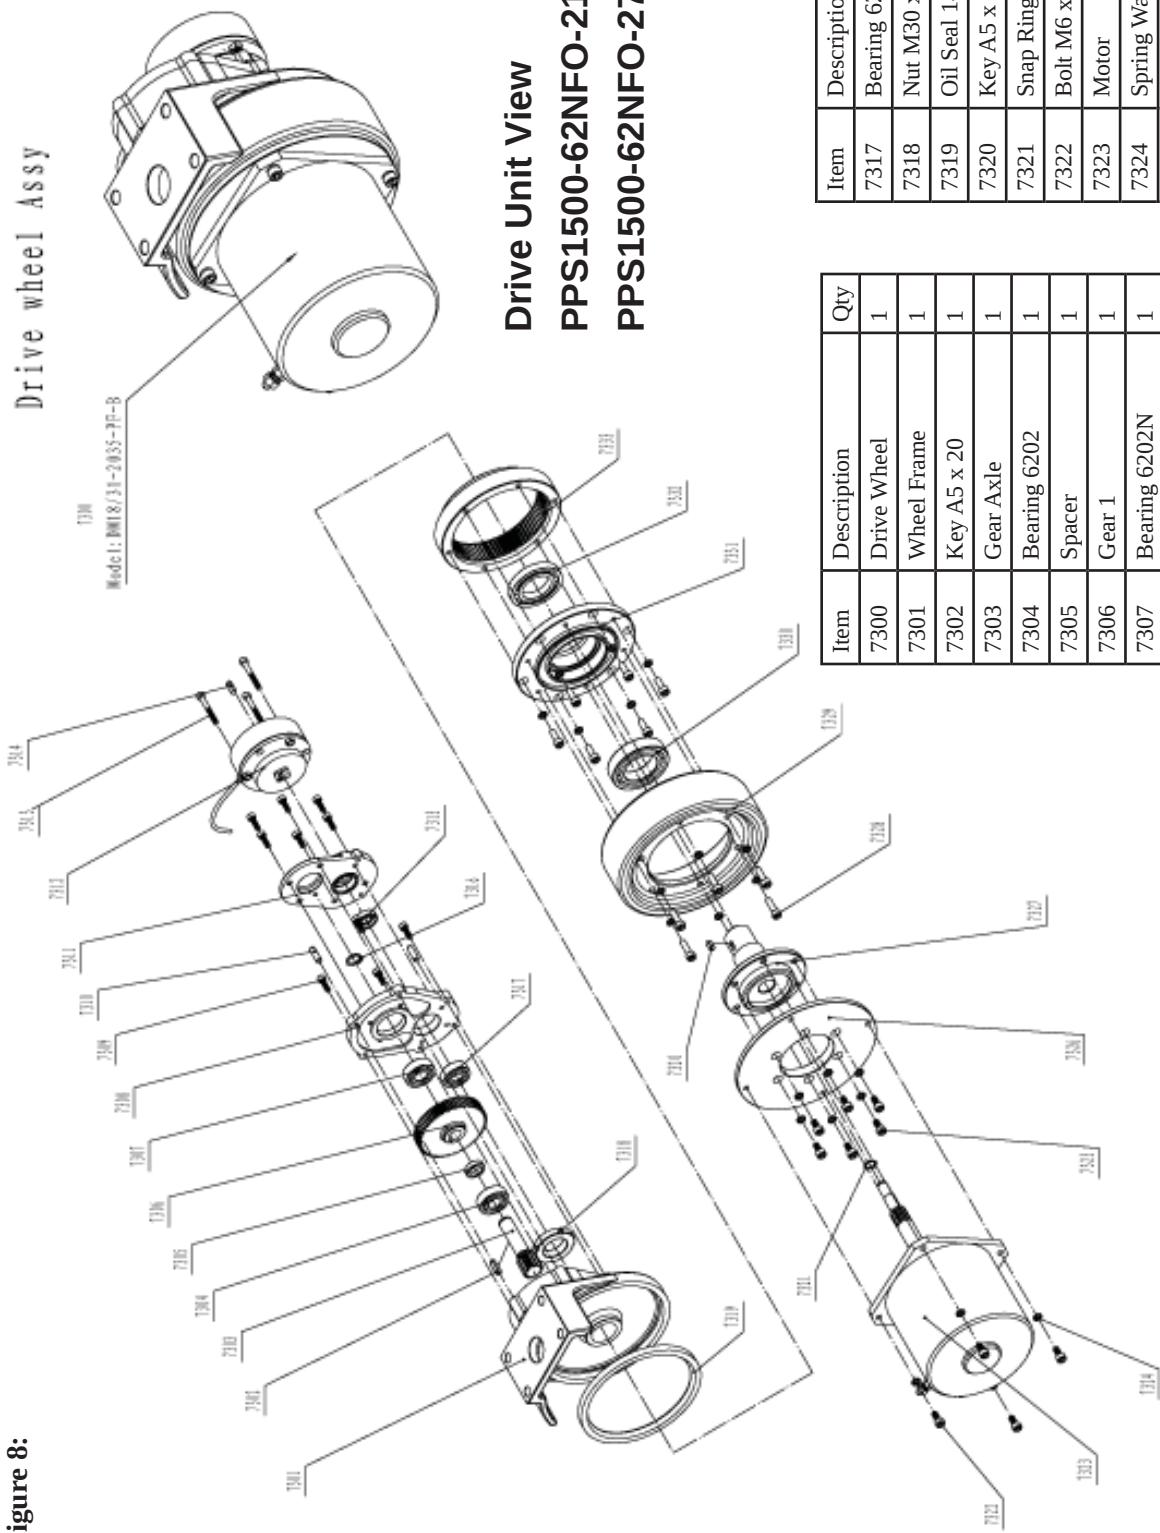


PowerStak Lite For Light Duty Use

Figure 9:

Control Pod

PPS1500-62NFO-21


PPS1500-62NFO-27

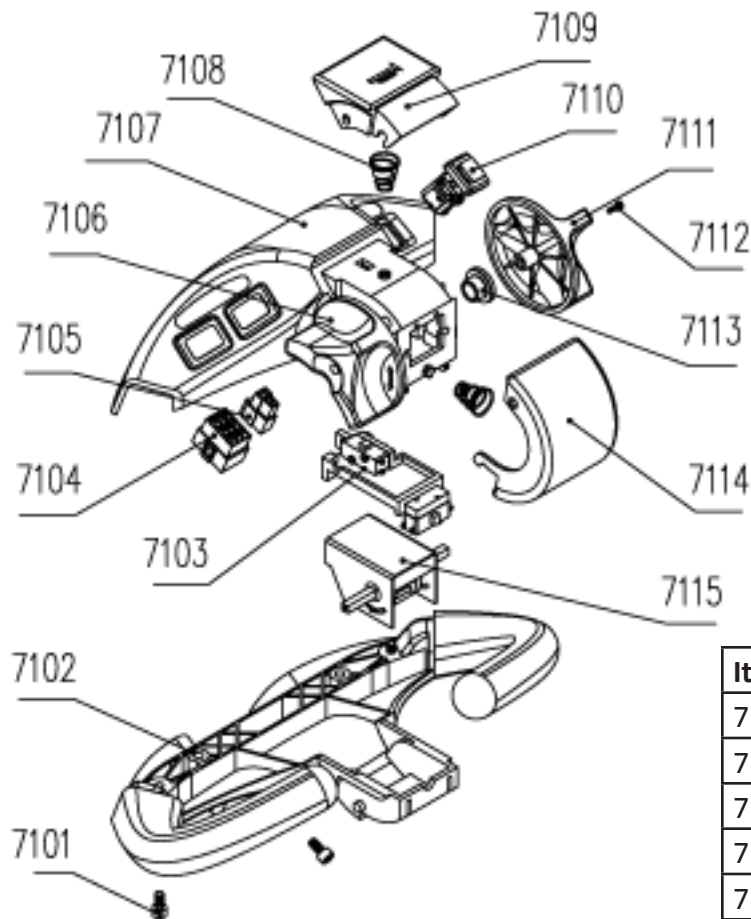

Item	Description	Qty
7101	Screw M6X12	3
7102	Handle Bottom Cover	1
7103	Front Button	1
7104	Electrical Outlet (big)	1
7105	Electrical Outles (small)	1
7106	Left Handle Cover	1
7107	Upper Cover	1
7108	Spring	2
7109	Horn Button	1
7110	Button Group	1
7111	Right Handle Cover	1
7112	Bolt M3X10	2
7113	Washer	2
7114	Switch Cover	1
7115	Switch	1

PowerStak Lite For Light Duty Use

Figure 10:

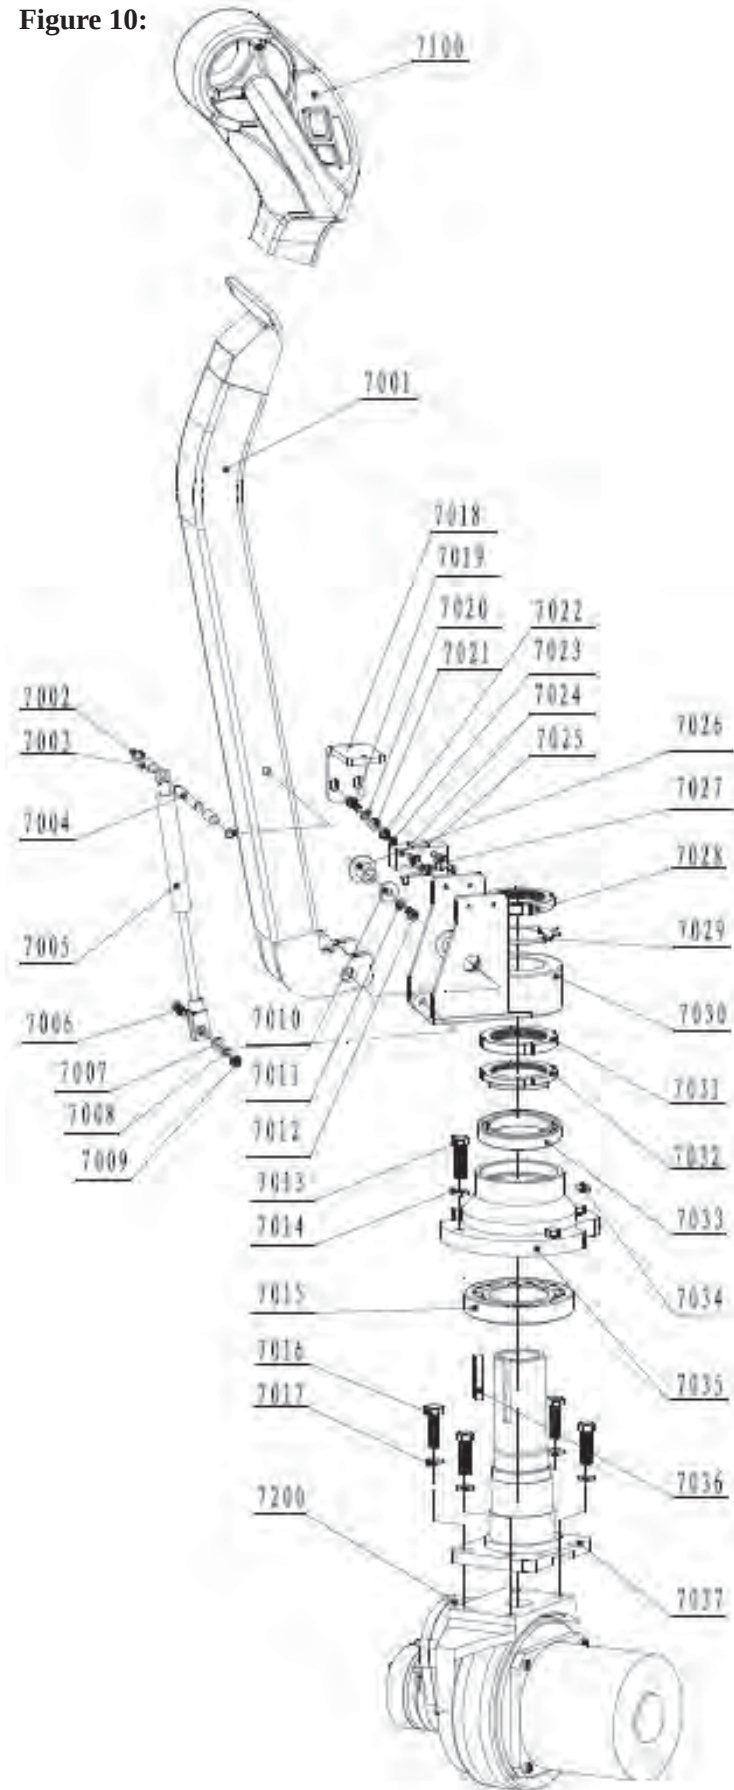


Steering Assembly PPS1500-62NFO-21 PPS1500-62NFO-27

Item	Description	Qty
7100	Handle	1
7200	Drive Wheel (350W)	1
7001	Handle Pipe Weld	1
7002	Snap Ring 8	1
7003	Holder	2
7004	Pin	1
7005	Air Spring	1
7006	Bolt M8X30	1
7007	Flat Washer 8	1
7008	Spring Washer 8	1
7009	Nut M8	1
7010	Washer	2
7011	Spring Washer 6	2
7012	Bolt M6X12	2
7013	Bolt M10X30	4
7014	Spring Washer 10	4
7015	Bearing 33013	1
7016	Bolt M10X30	4
7017	Spring Washer 10	4
7018	Cover Holder	1
7019	Bolt M6X25	2
7020	Spring Washer 6	2
7021	Flat Washer 6	2
7022	Nut M6	2
7023	Nut M4	2
7024	Travel Switch	1
7025	Flat Washer 4	2
7026	Short Screw	2
7027	Bolt M4X25	2
7028	Round Nut M52X1.5	1
7029	Lock Washer 52	1
7030	Handle Connect Base	1
7031	Round Nut M56X2	
7032	Washer	1
7033	Bearing 61812	1
7034	Oil Fitting M8X1	1
7035	Drive Wheel Holder	1
7036	A-Flat Key 8X45	1
7037	Steering Base Weld	1


PowerStak Lite For Light Duty Use

Figure 11:

**Power Unit View
PPS1500-62NFO-21
PPS1500-62NFO-27**

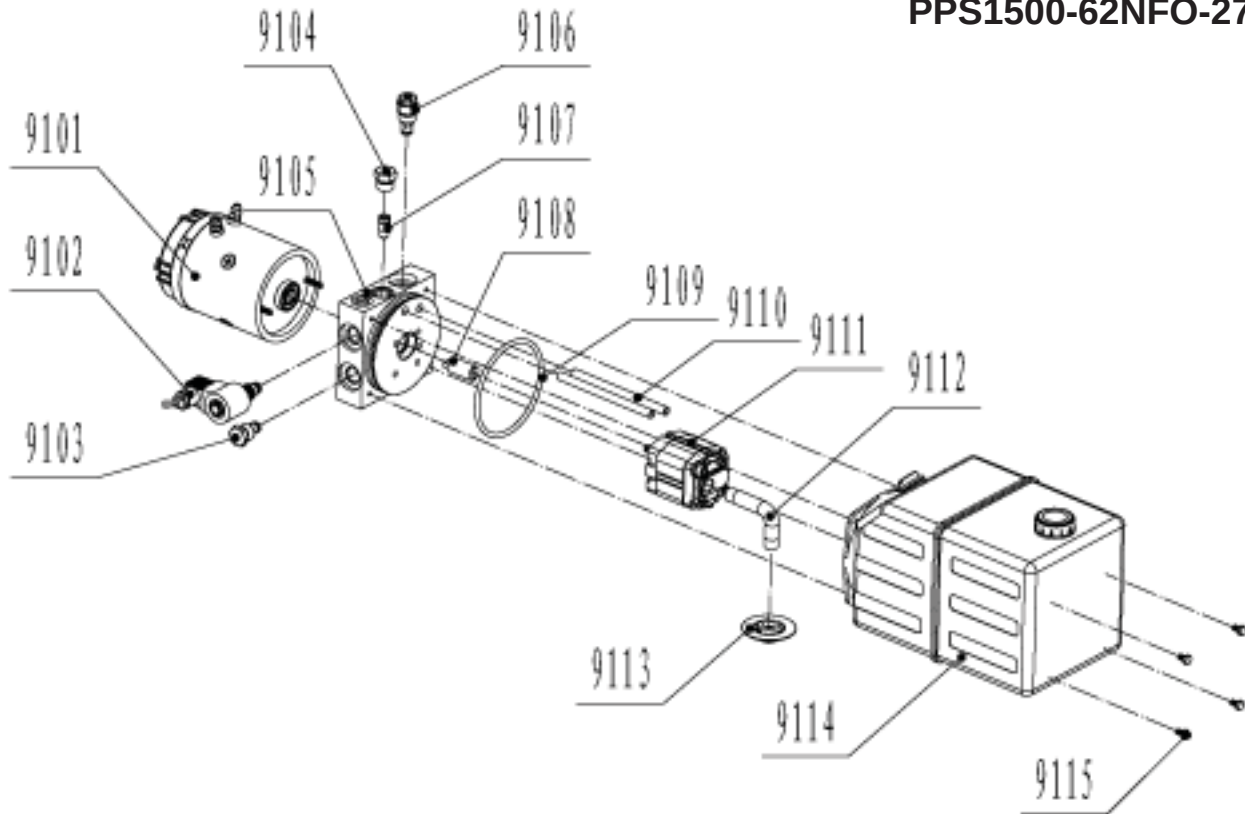


Item	Description	Qty
9101	Motor	1
9102	Solenoid valve	1
9103	Check valve	1
9104	Screw	1
9105	Center block	1
9106	Relief valve	1
9107	Flow control valve	1
9108	Connect shaft	1
9109	O ring	1
9110	Return pipe	2
9111	Gear pump	1
9112	Suction pipe	1
9113	Filter	1
9114	Plastic tank	1
9115	Bolt	4

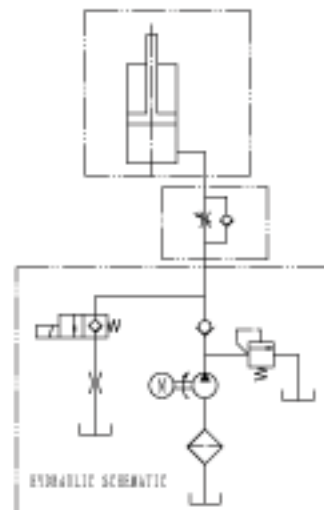

PowerStak Lite For Light Duty Use

Figure 12:

Carriage Assembly PPS1500-62NFO-21 PPS1500-62NFO-27

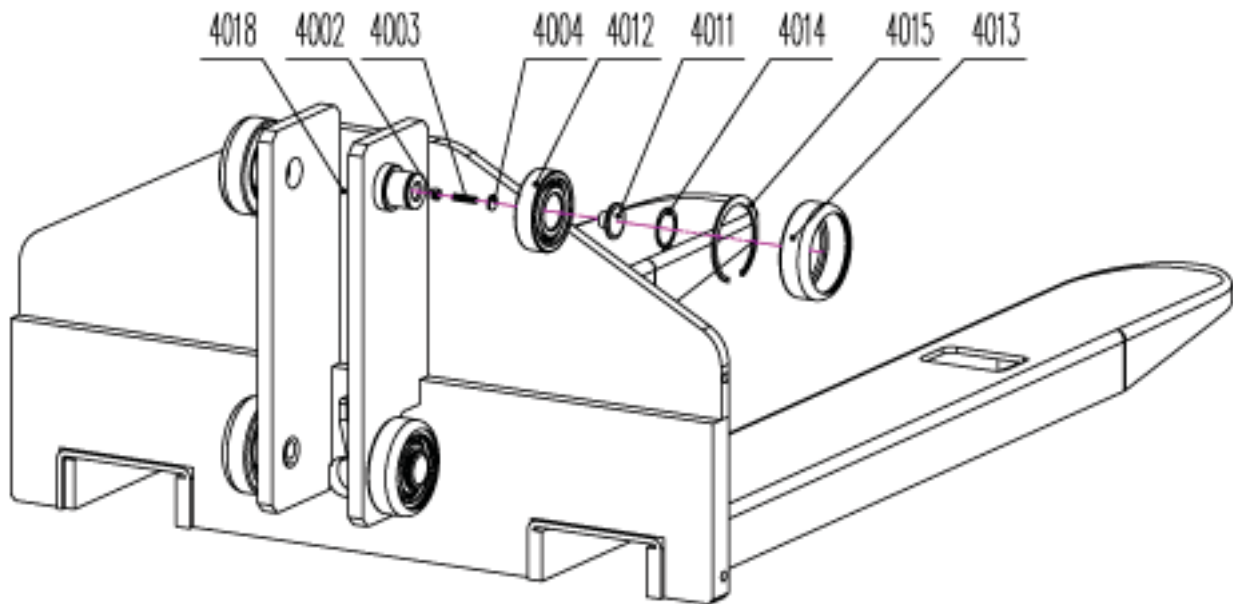

Item	Description	Qty
4002	Nut M6	4
4003	Bolt M6X25	4
4004	Middle Plate	4
4011	Adjustable Plate	4
4012	Bearing 6307	4
4013	Wheel Sleeve	4
4014	Snap Ring 35	4
4015	Snap Ring 80	4
4018	Lifting Frame	1

Figure 13: Labels & Precautionary Warnings



PowerStak Lite For Light Duty Use

Prior to January 2011 A- 80004302

REV	DESCRIPTION	DATE	APPROVED	MF NO.

Figure 14:

NOTES:
DIAGRAMS FOR POWERSTAKS WITH SERIAL #'S OF 080602 AND HIGHER.
(LARGE FLAT BLADE CONNECTORS.)


POWER CABLES FOR/REV CONT. MISC. & CONTROLLER FUEL GAGE & KEY HPU & BRAKE MID-HARNESS CONTROL HEAD	7	REF	EL CONN DIAG PWRSTK WIRE HARNESS	B	80004290																														
	6	REF	EL CONN DIAG PWRSTK WIRE HARNESS	B	80004289																														
	5	REF	EL CONN DIAG PWRSTK WIRE HARNESS	B	80004288																														
	4	REF	EL CONN DIAG PWRSTK FUEL GA & KEY SW	B	80004287																														
	3	REF	EL CONN DIAG PWRSTK WIRE HARNESS	B	80004286																														
	2	REF	EL CONN DIAG PWRSTK WIRE HARNESS	B	80004285																														
	1	REF	EL CONN DIAG PWRSTK CTRL HEAD	B	80004284																														
<table border="1"> <tr> <th>ITEM</th><th>QTY</th><th>DESCRIPTION</th><th colspan="3">PART NO.</th></tr> <tr> <td colspan="3"> PRESTOLIFTS 21 Park Street, Attleboro, MA 02703 WORLDWIDE MATERIAL HANDLING AND ERGONOMIC SOLUTIONS </td><td>DR</td><td>MOB</td><td>DATE</td></tr> <tr> <td colspan="3">REFERENCE 80004301</td><td>CK</td><td></td><td>DATE</td></tr> <tr> <td colspan="3"></td><td>SCALE</td><td>WT</td><td>DATE</td></tr> <tr> <td colspan="3"></td><td>3/4</td><td></td><td></td></tr> </table>						ITEM	QTY	DESCRIPTION	PART NO.			PRESTOLIFTS 21 Park Street, Attleboro, MA 02703 WORLDWIDE MATERIAL HANDLING AND ERGONOMIC SOLUTIONS			DR	MOB	DATE	REFERENCE 80004301			CK		DATE				SCALE	WT	DATE				3/4		
ITEM	QTY	DESCRIPTION	PART NO.																																
PRESTOLIFTS 21 Park Street, Attleboro, MA 02703 WORLDWIDE MATERIAL HANDLING AND ERGONOMIC SOLUTIONS			DR	MOB	DATE																														
REFERENCE 80004301			CK		DATE																														
			SCALE	WT	DATE																														
			3/4																																
3RD ANGLE PROJECTION 			USE OF PROPRIETARY INFORMATION LIMITED TO WRITTEN AGREEMENT																																
MODEL TITLE EL ARR POWERSTAK (STD)			80004302 A-DRAWING NUMBER																																
			A REV																																

THIS DRAWING MUST BE AT REVISION: 'A'

Figure 15:

Prior to January 2011

B-80004284

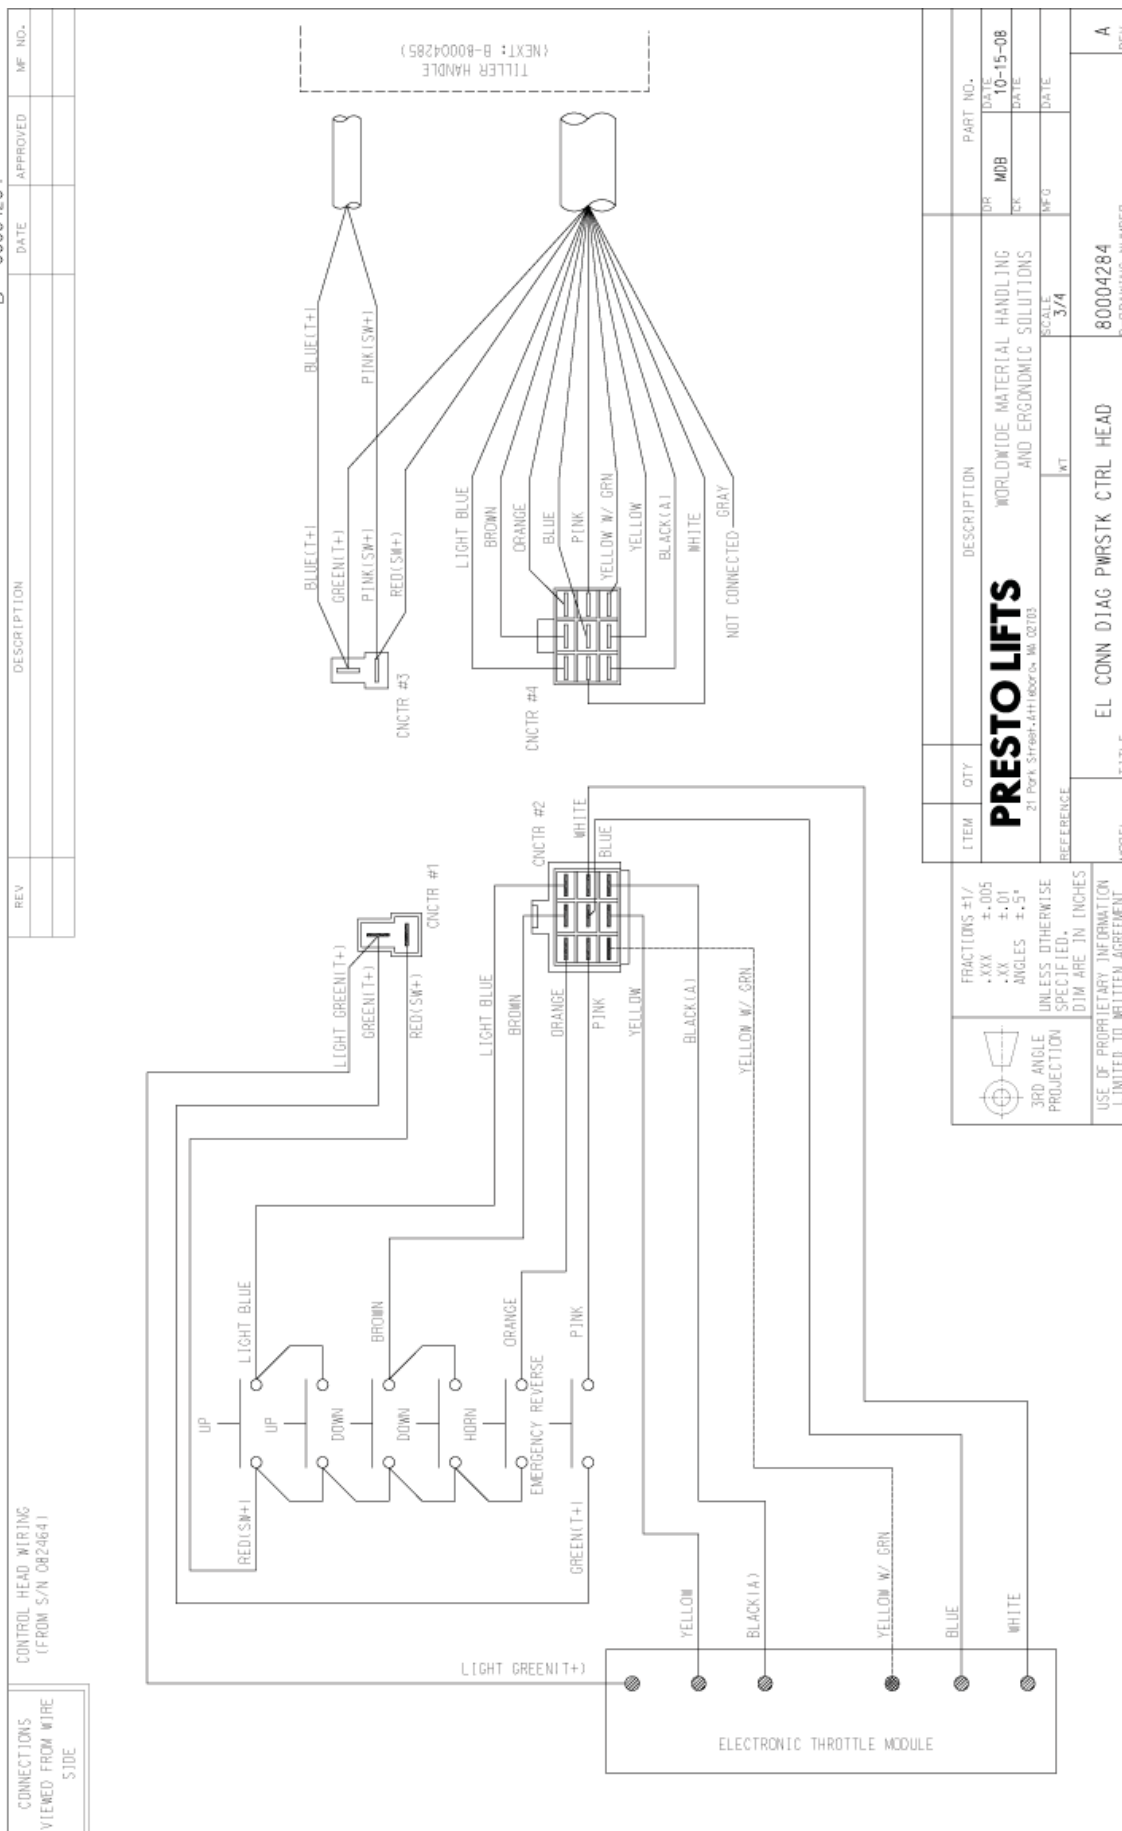

THIS DRAWING MUST BE AT REVISION: 'A'

PowerStak Lite For Light Duty Use

Figure 16:

Prior to January 2011


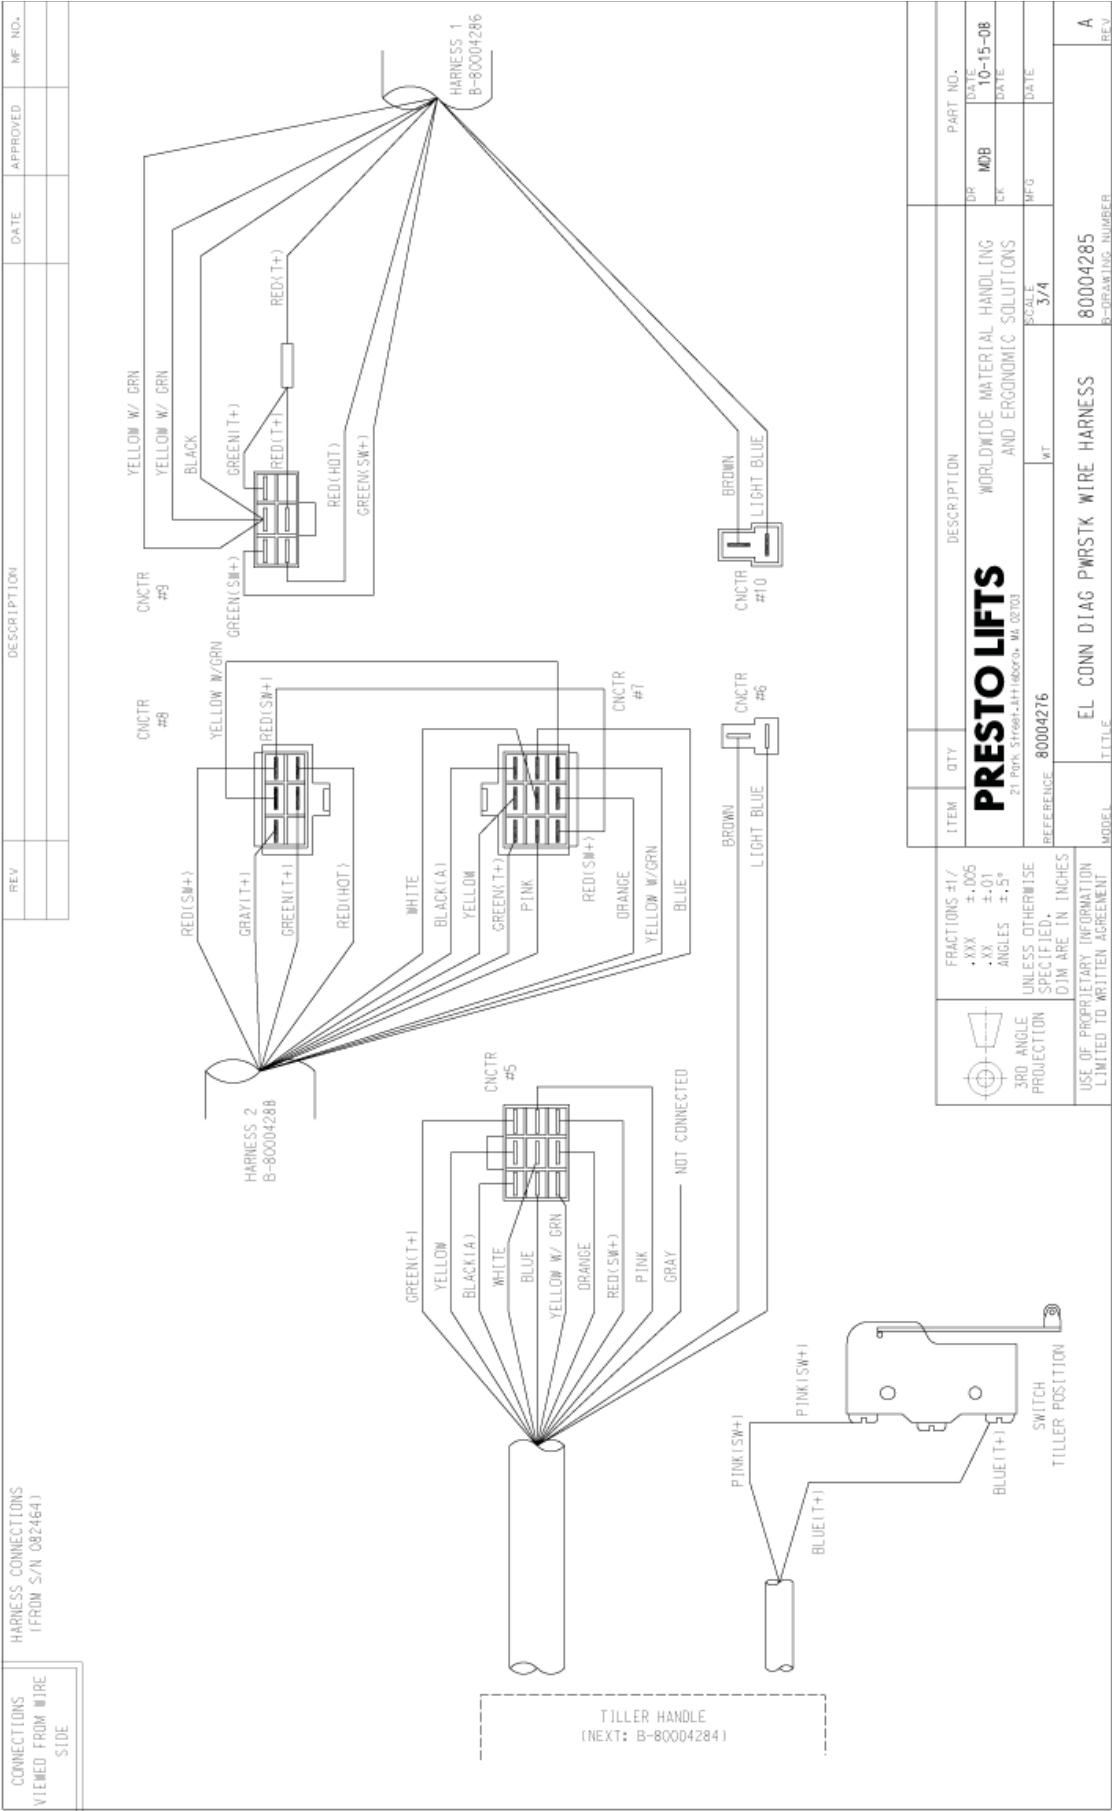


Figure 17:

Prior to January 2011

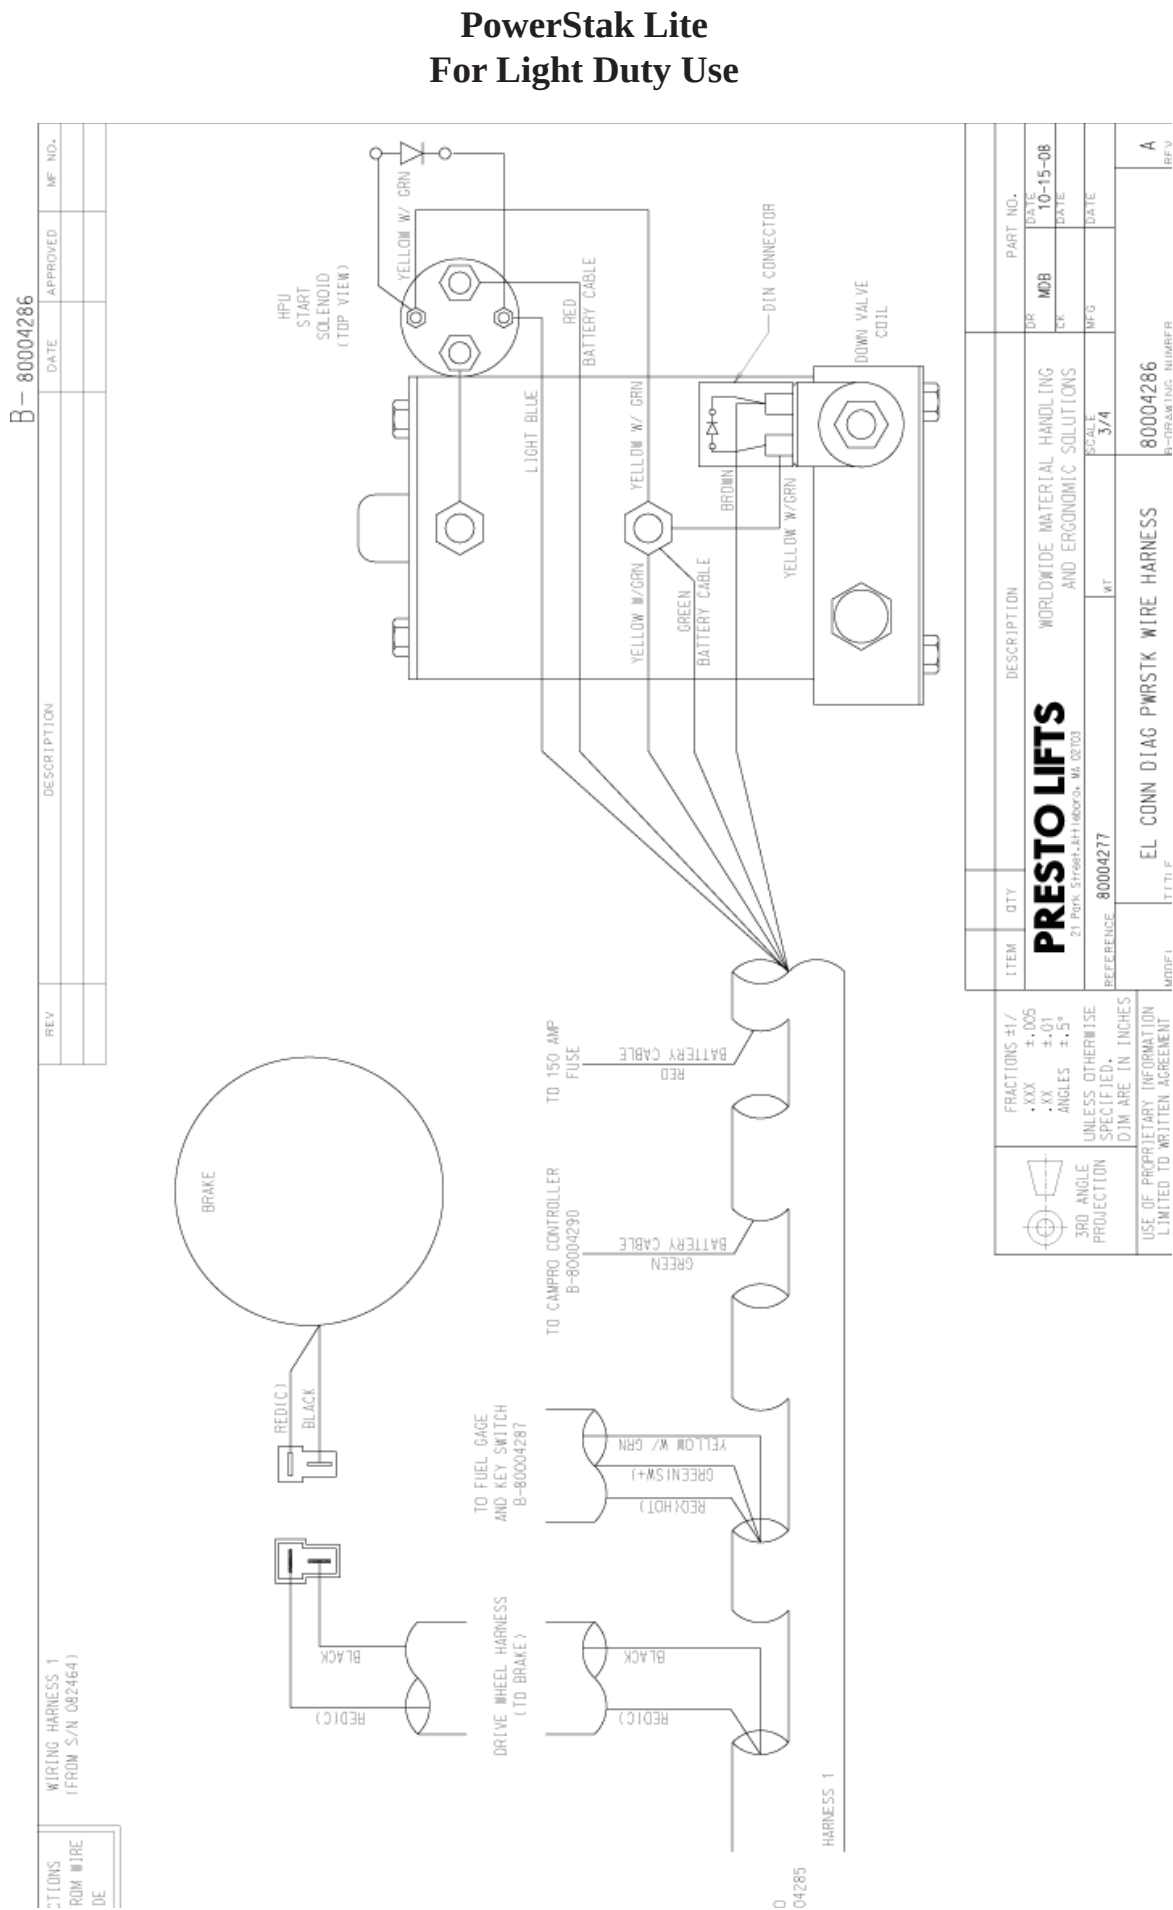

PowerStak Lite
For Light Duty Use

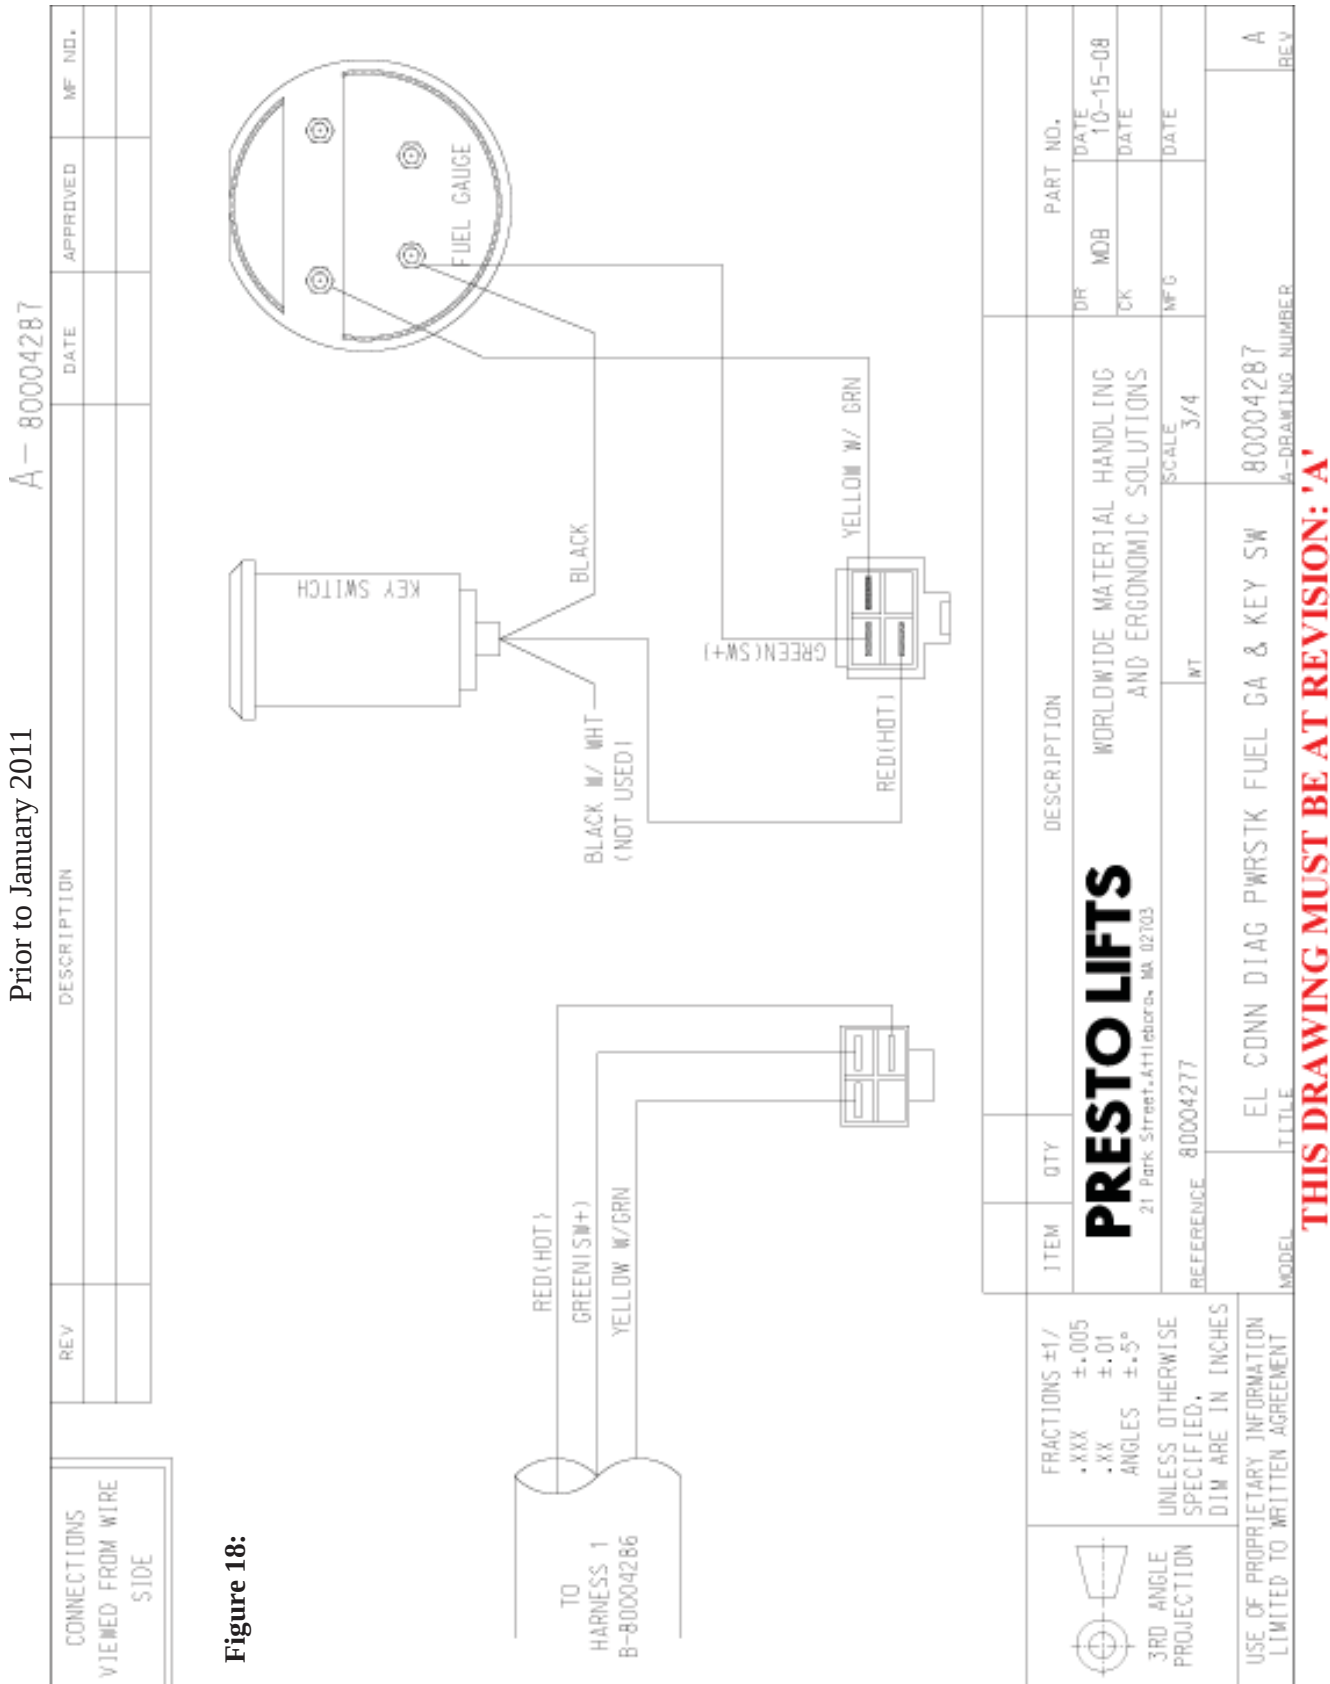


Figure 19:


B-80004288



PowerStak Lite For Light Duty Use


Figure 20:

Prior to January 2011

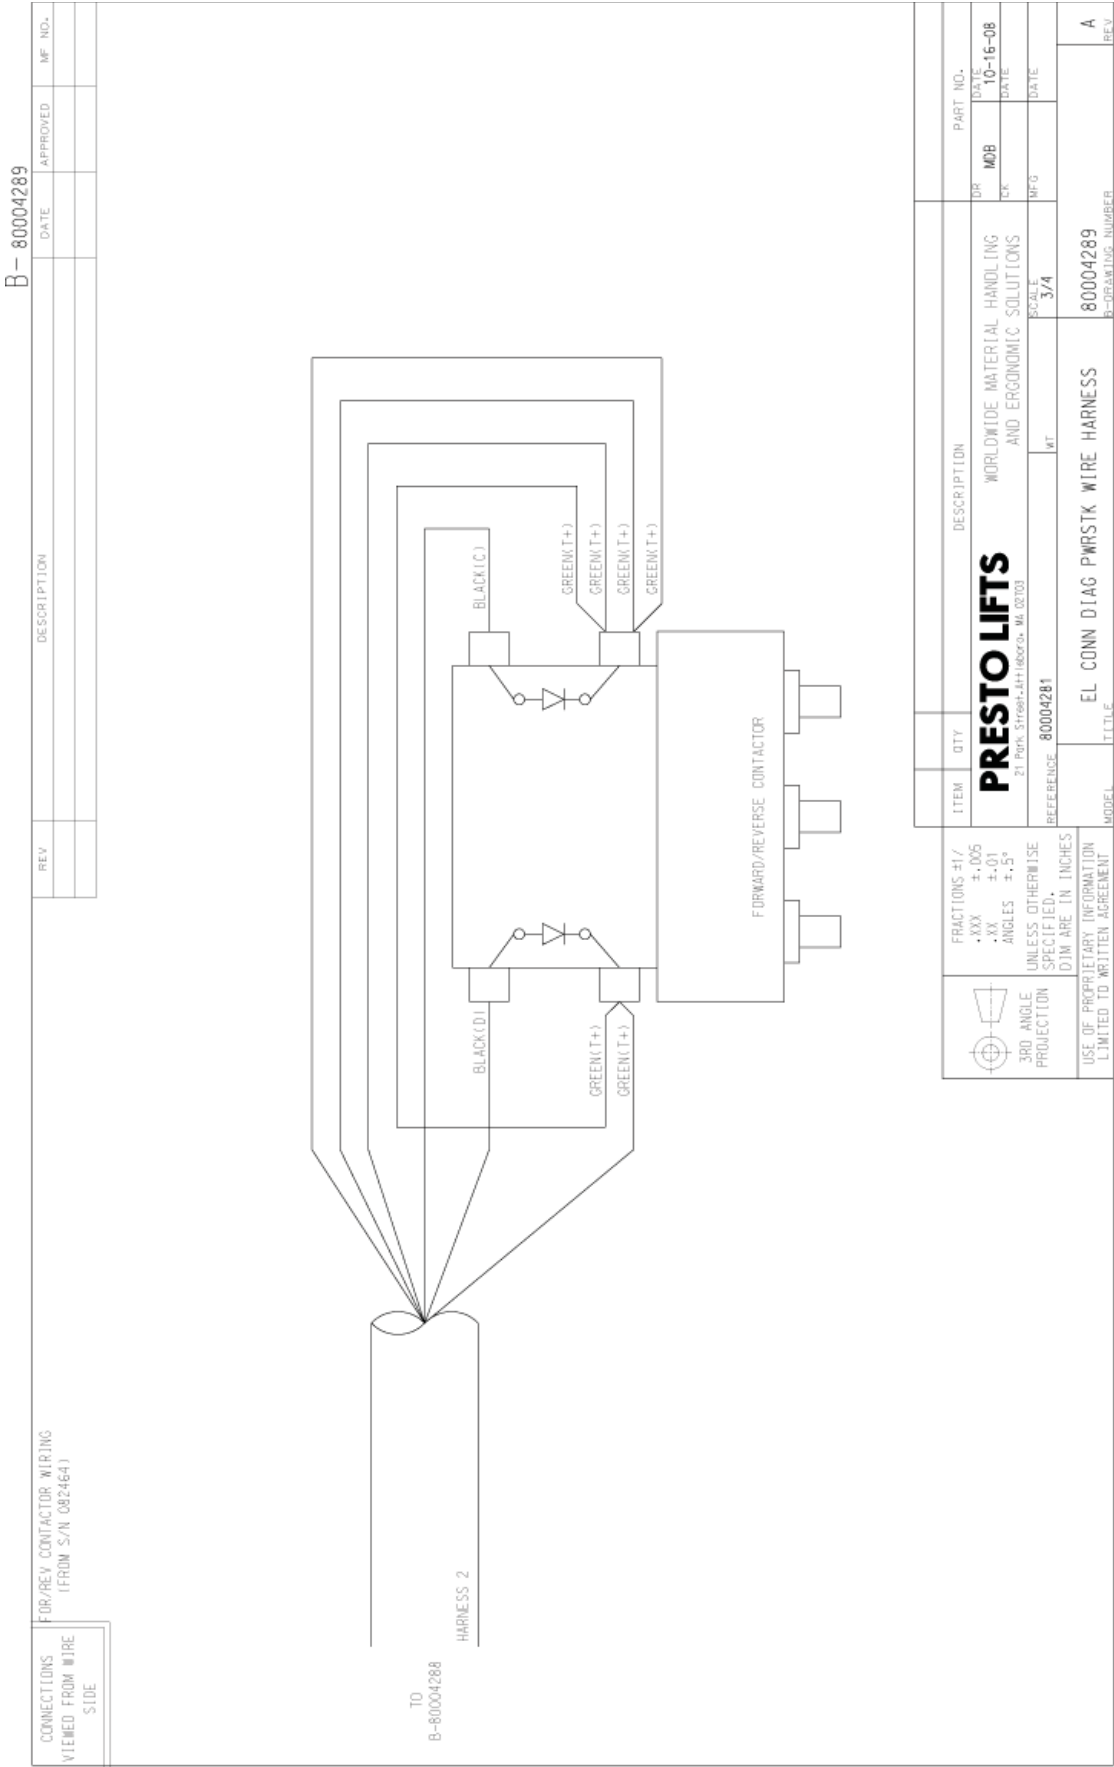

PowerStak Lite
For Light Duty Use


Figure 21: Prior to January 2011

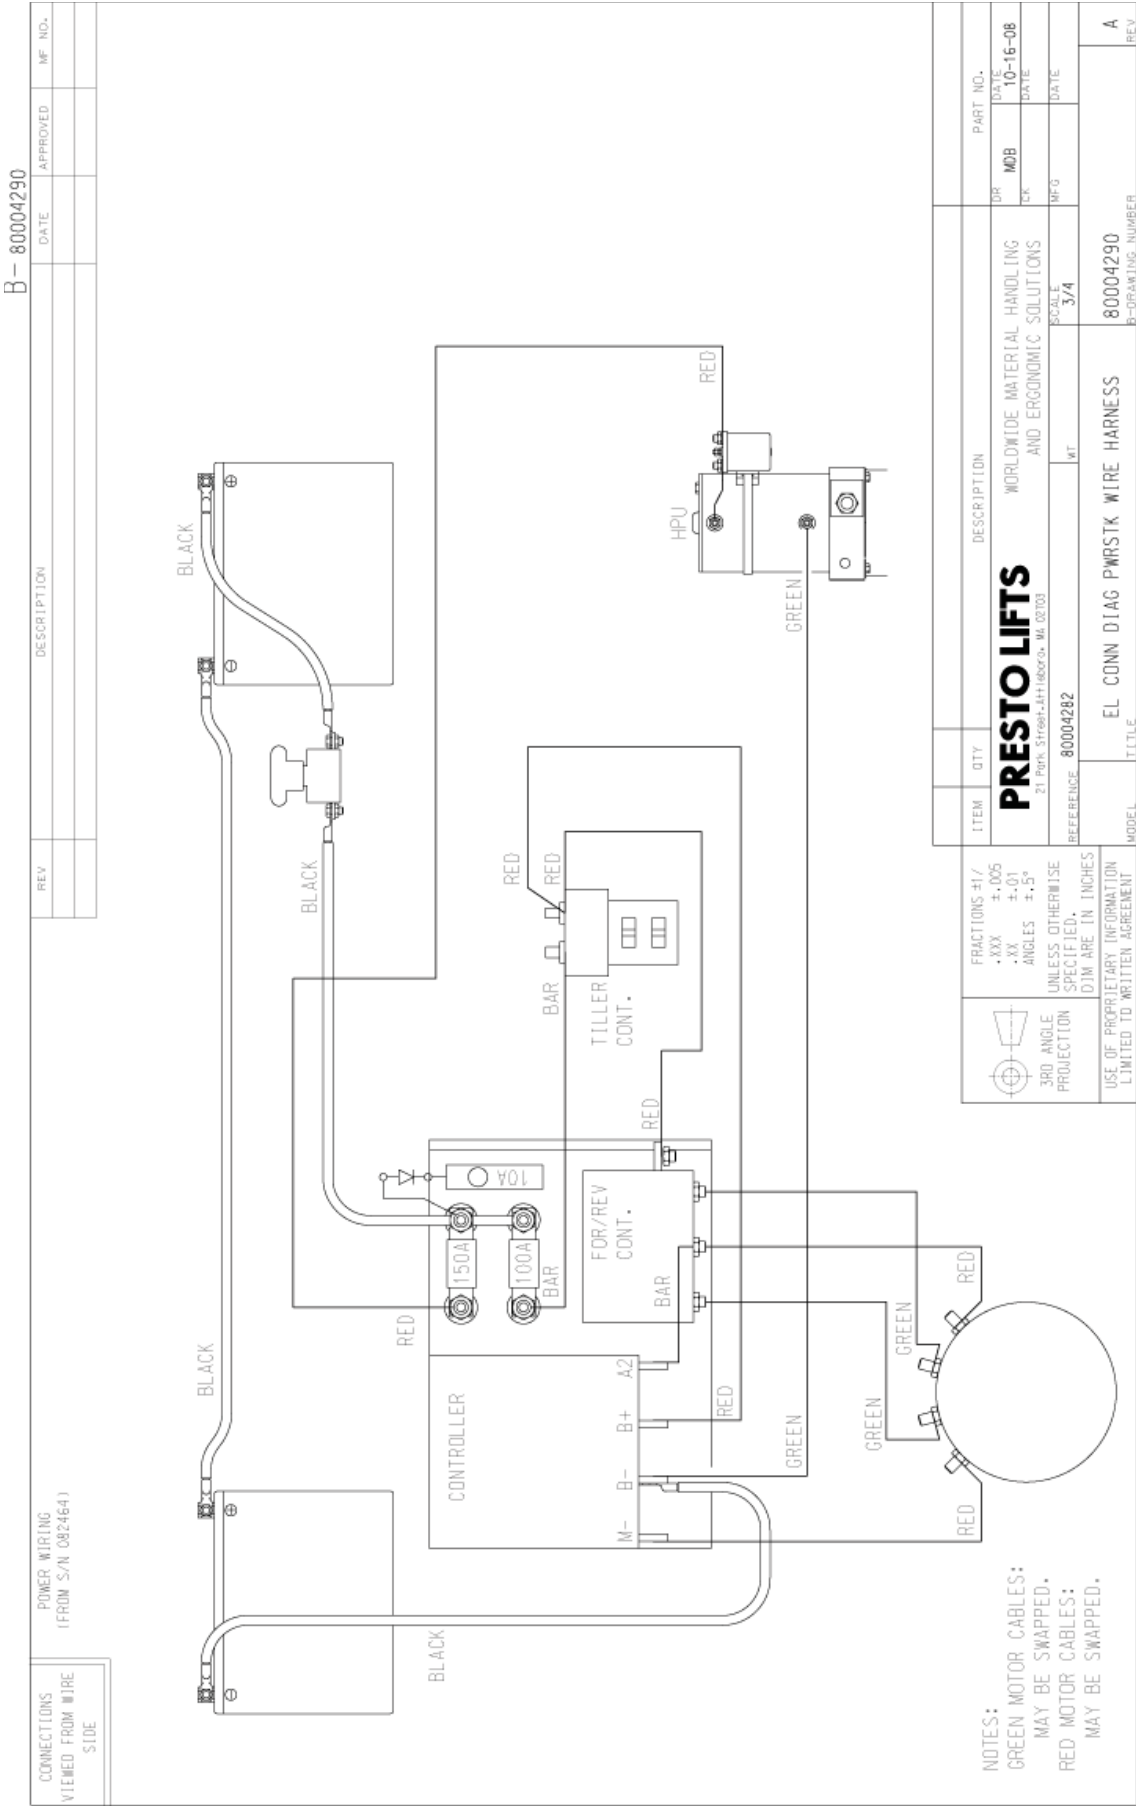

PowerStak Lite For Light Duty Use

January 2011 to Present

Figure 22:

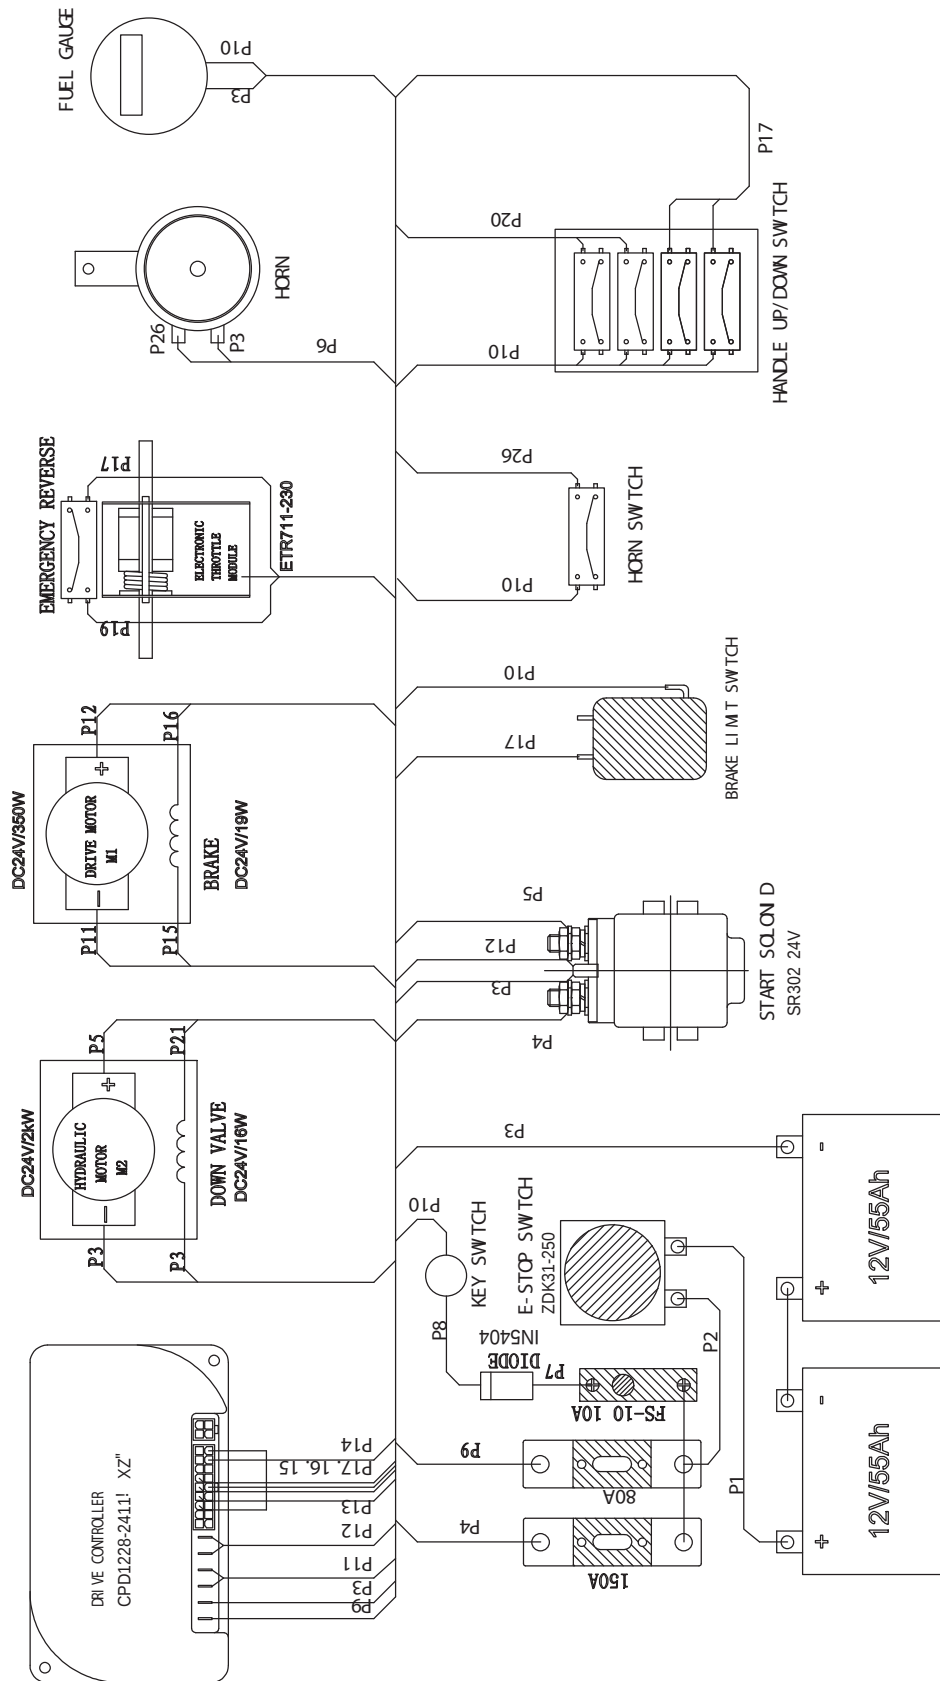

PowerStak Lite For Light Duty Use

January 2011 to Present

Figure 23:

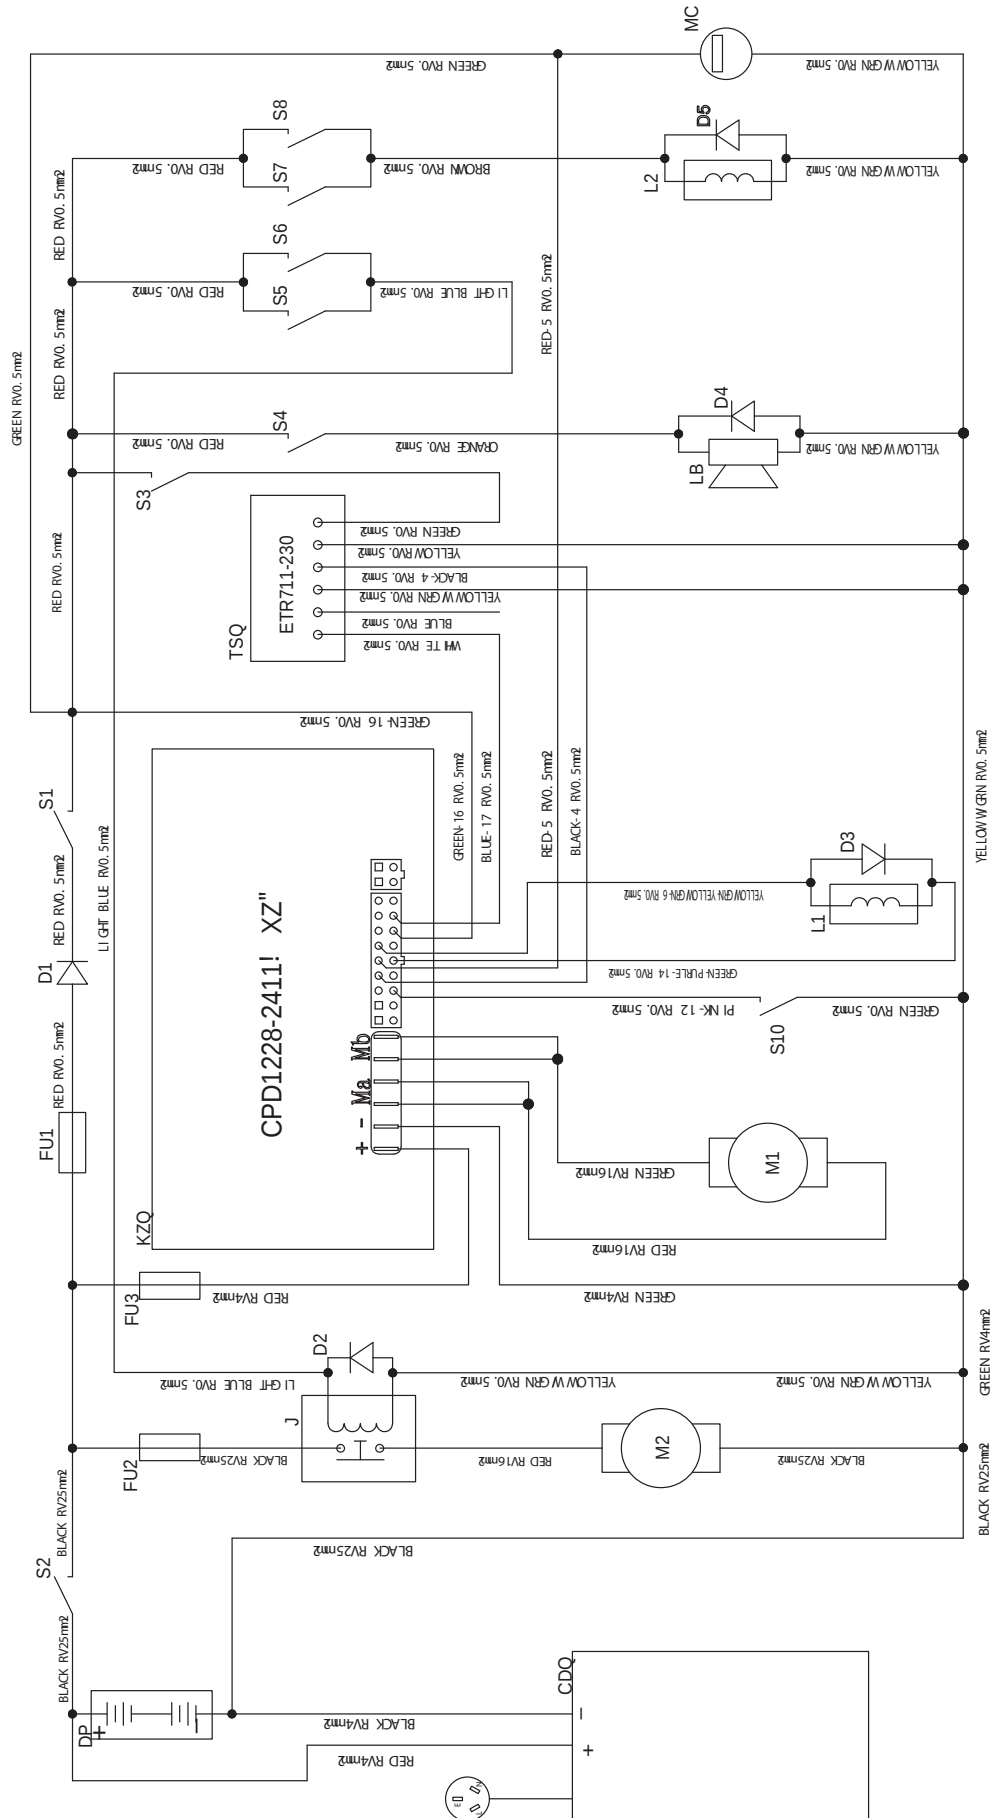


Figure 24:

PRESTO OWNER'S MANUAL

**POWERSTAK LITE PPS1500-62NFO-21/27**

PowerStak Lite For Light Duty Use

Ordering Replacement Parts

Presto Lifts has carefully chosen the components in your unit to be the best available for the purpose. Replacement parts should be identical to the original equipment. Presto Lifts will not be responsible for equipment failures resulting from the use of incorrect replacement parts or from unauthorized modifications to the unit.

Presto Lifts can supply all replacement parts for your lift. With your order, please include the model number and the serial number of the unit. You can find these numbers on the name plate. This plate is located within the cabinet, or the angle iron cylinder cross support.

To order replacement parts, please call the Presto Parts Department. Parts are shipped subject to the following terms:

- FOB factory
- Returns only with the approval of our Parts Department.
- Credit cards preferred (except parts covered by warranty).
- Freight collect for truck (except parts covered by warranty).
- Freight - prepaid and invoice for small parcel shipments (except parts covered by warranty).

Parts replaced under warranty are on a “charge-credit” basis. We will invoice you when we ship the replacement part, then credit you when you return the worn or damaged part.

Presto Lifts Parts Department

21 Park Street, Attleboro, MA 02703

Telephone: 800-343-9322

FAX: 888-788-6496

Email: Service@PrestoLifts.com

www.PrestoLifts.com

**PowerStak Lite
For Light Duty Use**

RESTOCKING POLICY

PARTS

Standard parts may be returned with a 20% restocking fee. Modified or custom-engineered parts are not returnable. Unfortunately, due to potentially concealed damage, all sales of electrical assemblies are final.

QUALITY ISSUES

Should you feel there is a quality problem, please contact the seller to ask questions and gather information on how to rectify the issue. Presto Lift Inc. reserves the right to determine potential credits, as a result of factory defects, based on its inspection of the merchandise.

GENERAL

All products shipped from our factory have passed Quality Assurance inspection and testing. The carrier of choice has signed for, and accepted the product in new working condition. The customer should inspect to ensure it is not received damaged, has no concealed damage or is not incomplete. Parts orders are determined to be complete based upon Presto Lift, Inc. inspection sheets and carrier shipping weights.

MANY NEEDS REQUIRE MANY OPTIONS...

Presto LIFTS



LET PRESTO MEET THOSE NEEDS!

Call Presto Sales
for stock or
customized lift inquiries:
800-343-9322

Email: sales@prestolifts.com

